

## ProtoNode FPC-N34 and ProtoNode FPC-N35 Start-up Guide

**For Interfacing Pure Humidifier Products: Intac Controller  
To Building Automation Systems:  
BACnet MS/TP, BACnet/IP, Modbus TCP/IP, Metasys N2  
and LonWorks**

### APPLICABILITY & EFFECTIVITY

Explains ProtoNode hardware and installation.

The instructions are effective for the above as of August 2016.

## **Technical Support**

Thank you for purchasing the ProtoNode for Pure Humidifier.

Please call Pure Humidifier for Technical support of the ProtoNode product.

SMC does not provide direct support. If Pure Humidifier needs to escalate the concern, they will contact Sierra Monitor Corporation for assistance.

Support Contact Information:

PURE Humidifier Co  
141 Jonathan Blvd N  
Chaska, MN 55318

Customer Service:  
952-368-9335

Email: [info@purehumidifier.com](mailto:info@purehumidifier.com)

Website: [www.purehumidifier.com](http://www.purehumidifier.com)

## Quick Start Guide

1. Record the information about the unit. (**Section 3.1**)
2. Set the device's Modbus RTU serial settings (i.e. baud rate, parity, stop bits) and Modbus Node-ID for each of the devices that are to connect to ProtoNode FPC-N34 or FPC-N35. (**Section 3.3**)
3. FPC-N34: Select the Field Protocol on the S Bank Dip Switches. (**Section 3.4.1**)
4. Enable the ProtoNode "Auto Discovery" mode on Dip Switch Bank S. (**Section 3.4.2**)
5. BACnet MS/TP (FPC-N34): Set the MAC Address on DIP Switch Bank A. (**Section 3.5.1**)
6. BACnet MS/TP or BACnet/IP (FPC-N34): Set the BACnet Device Instance. (**Section 3.5.2**)
7. BACnet MS/TP (FPC-N34): Set the BAUD rate of the BACnet MS/TP Field Protocol on DIP Switch Bank B. (**Section 3.5.3**)
8. Connect ProtoNode's 6 pin RS-485 connector to the RS-485 network that is connected to each of the devices. (**Section 4.2**)
9. **Connect ProtoNode FPC-N34's 3 pin RS-485 port to the Field Protocol cabling, (Section 4.3) or connect ProtoNode FPC-N35's 2 pin LonWorks port to the Field Protocol cabling. (Section 4.4)**
10. Connect Power to ProtoNode's 6 pin connector. (**Section 4.5**)
11. When power is applied it will take about 3 minutes for all the devices to be discovered, and the configuration file to be built. Once Auto-Discovery is complete turn OFF the S3 DIP Switch to save the configuration settings. (**Section 4.5.1**)
12. BACnet/IP or Modbus TCP/IP (FPC-N34): Use the ProtoNode's embedded tool which is accessed with a browser, referred to in this manual as the Web Configurator, to change the IP Address. No changes to the configuration file are necessary. (**Section 5**)
13. LonWorks (FPC-N35): The ProtoNode must be commissioned on the LonWorks Network. This needs to be done by the LonWorks administrator using a LonWorks Commissioning tool. (**Section 8**)

## TABLE OF CONTENTS

<b>1</b>	<b>Certification .....</b>	<b>6</b>
1.1	BTL Mark – BACnet Testing Laboratory.....	6
1.2	LonMark Certification.....	6
<b>2</b>	<b>Introduction .....</b>	<b>7</b>
2.1	ProtoNode Gateway .....	7
<b>3</b>	<b>ProtoNode Setup.....</b>	<b>8</b>
3.1	Record Identification Data .....	8
3.2	Point Count Capacity and Registers per Device .....	8
3.3	Configuring Device Communications .....	9
3.3.1	<i>Input COM settings on all Devices connected to the ProtoNode.....</i>	<i>9</i>
3.3.2	<i>Set Modbus RTU Node-ID for each Device attached to the ProtoNode.....</i>	<i>9</i>
3.4	Selecting the Desired Field Protocol and Enabling Auto-Discovery.....	10
3.4.1	<i>Selecting Desired Field Protocol.....</i>	<i>10</i>
3.4.2	<i>Enabling Auto-Discovery.....</i>	<i>11</i>
3.5	BMS Network Settings: MAC Address, Device Instance and Baud Rate .....	12
3.5.1	<i>BACnet MS/TP (FPC-N34): Setting the MAC Address for BMS Network .....</i>	<i>12</i>
3.5.2	<i>BACnet MS/TP and BACnet/IP (FPC-N34): Setting the Device Instance .....</i>	<i>13</i>
3.5.3	<i>BACnet MS/TP (FPC-N34): Setting the Baud Rate for BMS Network.....</i>	<i>14</i>
<b>4</b>	<b>Interfacing ProtoNode to Devices .....</b>	<b>15</b>
4.1	ProtoNode FPC-N34 and FPC-N35 Showing Connection Ports.....	15
4.2	Device Connections to ProtoNode .....	16
4.2.1	<i>Connecting the Intac Controller's RS-485 DB9 port or Terminal block to the ProtoNode's Phoenix 6 pin connector.....</i>	<i>16</i>
4.2.2	<i>Biassing the Modbus RS-485 Device Network.....</i>	<i>17</i>
4.2.3	<i>End of Line Termination Switch for the Modbus RS-485 Device Network.....</i>	<i>18</i>
4.3	BACnet MS/TP or Metasys N2 (FPC-N34): Wiring Field Port to RS-485 Network .....	19
4.4	LonWorks (FPC-N35): Wiring LonWorks Devices to the LonWorks Terminal .....	19
4.5	Power-Up ProtoNode.....	20
4.5.1	<i>Auto-Discovery: After Completion – Turn Off to Save Configuration.....</i>	<i>21</i>
<b>5</b>	<b>BACnet/IP or Modbus TCP/IP: Change the Protonode IP Address .....</b>	<b>22</b>
5.1	Connect the PC to ProtoNode via the Ethernet Port .....	22
5.2	BACnet/IP and Modbus TCP/IP: Setting IP Address for Field Network .....	23
<b>6</b>	<b>BACnet MS/TP and BACnet/IP: Setting Node_Offset to Assign Specific Device Instances.....</b>	<b>25</b>
<b>7</b>	<b>How to Start the Installation Over: Clearing Profiles .....</b>	<b>26</b>
<b>8</b>	<b>LonWorks (FPC-N35): Commissioning ProtoNode on a lonworks Network .....</b>	<b>27</b>
8.1	Commissioning ProtoNode FPC-N35 on a LonWorks Network .....	27
8.1.1	<i>Instructions to Download XIF File from ProtoNode FPC-N35 Using Browser .....</i>	<i>27</i>
<b>9</b>	<b>BACnet Explorer .....</b>	<b>29</b>
<b>Appendix A. Troubleshooting.....</b>		<b>30</b>
Appendix A.1.	Lost or Incorrect IP Address .....	30
Appendix A.2.	Viewing Diagnostic information.....	31
Appendix A.3.	Checking Wiring and Settings.....	32
Appendix A.4.	LED Diagnostics for Communications Between ProtoNode and Devices .....	33
Appendix A.5.	Taking Diagnostic Capture with the FieldServer Toolbox.....	34
Appendix A.6.	Updating Firmware.....	37
Appendix A.7.	BACnet: Setting Network_Number for more than one ProtoNode on Subnet.....	37
Appendix A.8.	Securing ProtoNode with Passwords .....	38
Appendix A.9.	Reading Data Arrays.....	38
<b>Appendix B. Vendor Information - Pure Humidifier.....</b>		<b>39</b>
Appendix B.1.	Intac Controller Modbus RTU Mappings to BACnet, Metasys N2 and LonWorks.....	39

<b>Appendix C. “A” Bank DIP Switch Settings .....</b>	<b>42</b>
Appendix C.1. “A” Bank DIP Switch Settings .....	42
<b>Appendix D. Reference .....</b>	<b>45</b>
Appendix D.1. Specifications .....	45
Appendix D.1.1. Compliance with UL Regulations .....	45
<b>Appendix E. Limited 2 Year Warranty .....</b>	<b>46</b>

## LIST OF FIGURES

Figure 1: ProtoNode Part Numbers .....	8
Figure 2: Supported Point Count Capacity .....	8
Figure 3: Registers per Device .....	8
Figure 4: Modbus COM Settings .....	9
Figure 5: S Bank DIP Switches .....	10
Figure 6: S3 DIP Switch setting for Auto Discovering Devices .....	11
Figure 7: MAC Address DIP Switches .....	12
Figure 8: BMS Baud Rate DIP Switches .....	14
Figure 9: BMS Baud Rate .....	14
Figure 10: ProtoNode FPC-N34 (upper) and ProtoNode FPC-N35 (lower) .....	15
Figure 11: Intac Controller's Modbus RTU Connection Wiring to the ProtoNode .....	16
Figure 12: Modbus RS-485 Biasing Switch on the ProtoNode N34 (left) and ProtoNode N35 (right) .....	17
Figure 13: Modbus RS-485 End-Of-Line Termination Switch on the ProtoNode N34 (left) and .....	18
Figure 14: Connection from ProtoNode to RS-485 Field Network .....	19
Figure 15: RS-485 BMS Network EOL Switch .....	19
Figure 16: LonWorks Terminal .....	19
Figure 17: Required current draw for the ProtoNode .....	20
Figure 18: Power Connections .....	20
Figure 19: S3 DIP Switch setting for Auto Discovering Devices .....	21
Figure 20: Web Configurator Screen .....	23
Figure 21: Changing IP Address via FS-GUI .....	24
Figure 22: Web Configurator Screen with Active Profiles .....	25
Figure 23: LonWorks Service Pin Location .....	27
Figure 24: Sample of Fserver.XIF File Generated .....	28
Figure 25: BACnet Explorer on a BACnet Network .....	29
Figure 26: Ethernet Port Location .....	30
Figure 27: Error messages screen .....	31
Figure 28: Diagnostic LEDs .....	33
Figure 29: Ethernet Port Location .....	34
Figure 31: Web Configurator – Setting Network Number for BACnet .....	37
Figure 32: Specifications .....	45

## 1 CERTIFICATION

### 1.1 BTL Mark – BACnet Testing Laboratory



The BTL Mark on ProtoNode is a symbol that indicates that a product has passed a series of rigorous tests conducted by an independent laboratory which verifies that the product correctly implements the BACnet features claimed in the listing. The mark is a symbol of a high-quality BACnet product.

Go to <http://www.BACnetInternational.net/btl/> for more information about the BACnet Testing Laboratory. Click here for [BACnet PIC Statement](#).

### 1.2 LonMark Certification




LonMark International is the recognized authority for certification, education, and promotion of interoperability standards for the benefit of manufacturers, integrators and end users. LonMark International has developed extensive product certification standards and tests to provide the integrator and user with confidence that products from multiple manufacturers utilizing LonMark devices work together. Sierra Monitor has more LonMark Certified gateways than any other gateway manufacturer, including the ProtoCessor, ProtoCarrier and ProtoNode for OEM applications and the full featured, configurable gateways.

## 2 INTRODUCTION

### 2.1 ProtoNode Gateway

ProtoNode is an external, high performance **Building Automation multi-protocol gateway** that is preconfigured to Auto-Discover any of Pure Humidifier's products (hereafter called "device") connected to the ProtoNode and automatically configures them for BACnet<sup>®1</sup> MS/TP, BACnet/IP, Metasys<sup>®2</sup> N2 by JCI, Modbus TCP/IP or LonWorks<sup>®3</sup>.

It is not necessary to download any configuration files to support the required applications. The ProtoNode is pre-loaded with tested Profiles/Configurations for the supported devices.

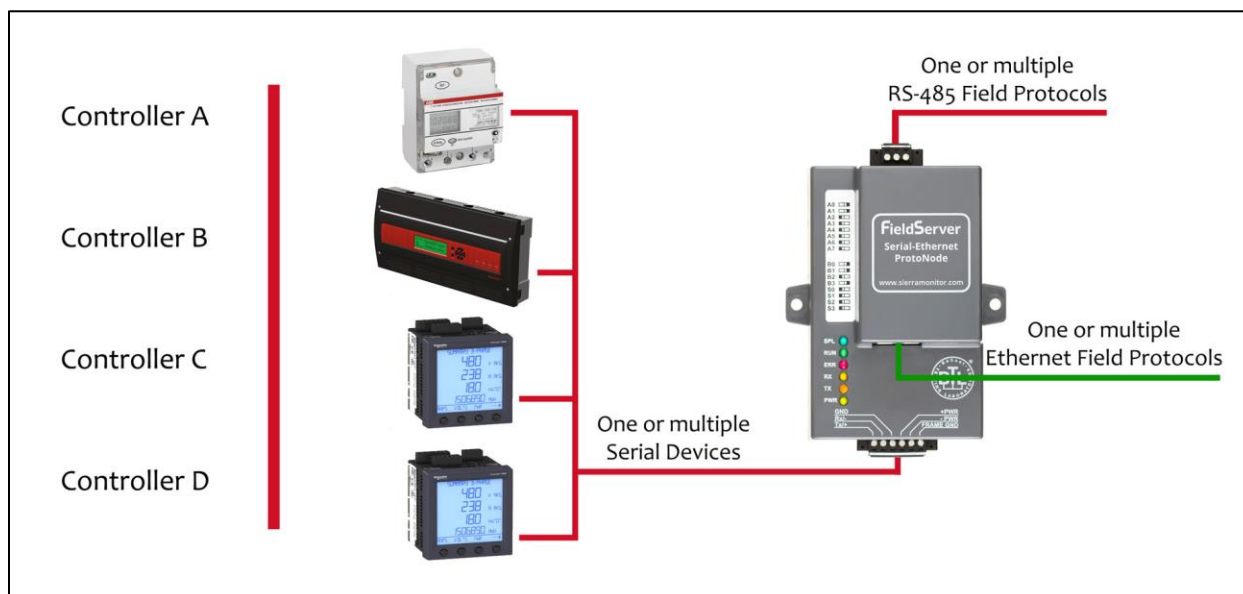

<sup>1</sup> BACnet is a registered trademark of ASHRAE

<sup>2</sup> Metasys is a registered trademark of Johnson Controls Inc.

<sup>3</sup> LonWorks is a registered trademark of Echelon Corporation

### 3 PROTONODE SETUP

#### 3.1 Record Identification Data

Each ProtoNode has a unique part number located on the side or the back of the unit. This number should be recorded, as it may be required for technical support. The numbers are as follows:

Model	Part Number
ProtoNode N34	FPC-N34-0806
ProtoNode N35	FPC-N35-0807
Figure 1: ProtoNode Part Numbers	

- FPC-N34 units have the following 3 ports: RS-485 + Ethernet + RS-485
- FPC-N35 units have the following 3 ports: LonWorks + Ethernet + RS-485

#### 3.2 Point Count Capacity and Registers per Device

The total number of Registers presented by all of the devices attached to the ProtoNode cannot exceed:

Part number	Total Registers
FPC-N34-0806	1,500
FPC-N35-0807	1,500
Figure 2: Supported Point Count Capacity	

Devices	Registers Per Device
Intac	90
Figure 3: Registers per Device	



## 3.3 Configuring Device Communications

### 3.3.1 Input COM settings on all Devices connected to the ProtoNode

- **All of the connected serial devices MUST have the same Baud Rate, Data Bits, Stop Bits, and Parity settings as the ProtoNode.**
- **Figure 4** specifies the device serial port settings required to communicate with the ProtoNode.

Port Setting	Device
Protocol	Modbus RTU
Baud Rate	38400
Parity	None
Data Bits	8
Stop Bits	1
Figure 4: Modbus COM Settings	


### 3.3.2 Set Modbus RTU Node-ID for each Device attached to the ProtoNode

- Set Modbus Node-ID for each of the devices attached to ProtoNode. The Modbus Node-ID's need to be uniquely assigned between 1 and 255.
  - **The Modbus Node-ID that is assigned for each device needs to be documented.**
    - The Modbus Node-ID's assigned are used for designating the Device Instance for BACnet/IP and BACnet MS/TP (**Section 3.5.2**)
- **The Metasys N2 and Modbus TCP/IP Node-IDs are automatically set to be the same value as the Node-ID of the Modbus RTU device.**

## 3.4 Selecting the Desired Field Protocol and Enabling Auto-Discovery

### 3.4.1 Selecting Desired Field Protocol

- ProtoNode FPC-N34 units use the “S” bank of DIP switches (S0 – S2) to select the Field Protocol.
  - See the table in [Figure 5](#) for the switch settings for the ProtoNode.
  - The OFF position is when the DIP switches are set closest to the outside of the box.
- ProtoNode FPC-N35 units do not use the “S” bank DIP switches (S0 – S2) to select a Field Protocol.
  - On ProtoNode FPC-N35 units, these switches are disabled; the Field Protocol is always LonWorks.

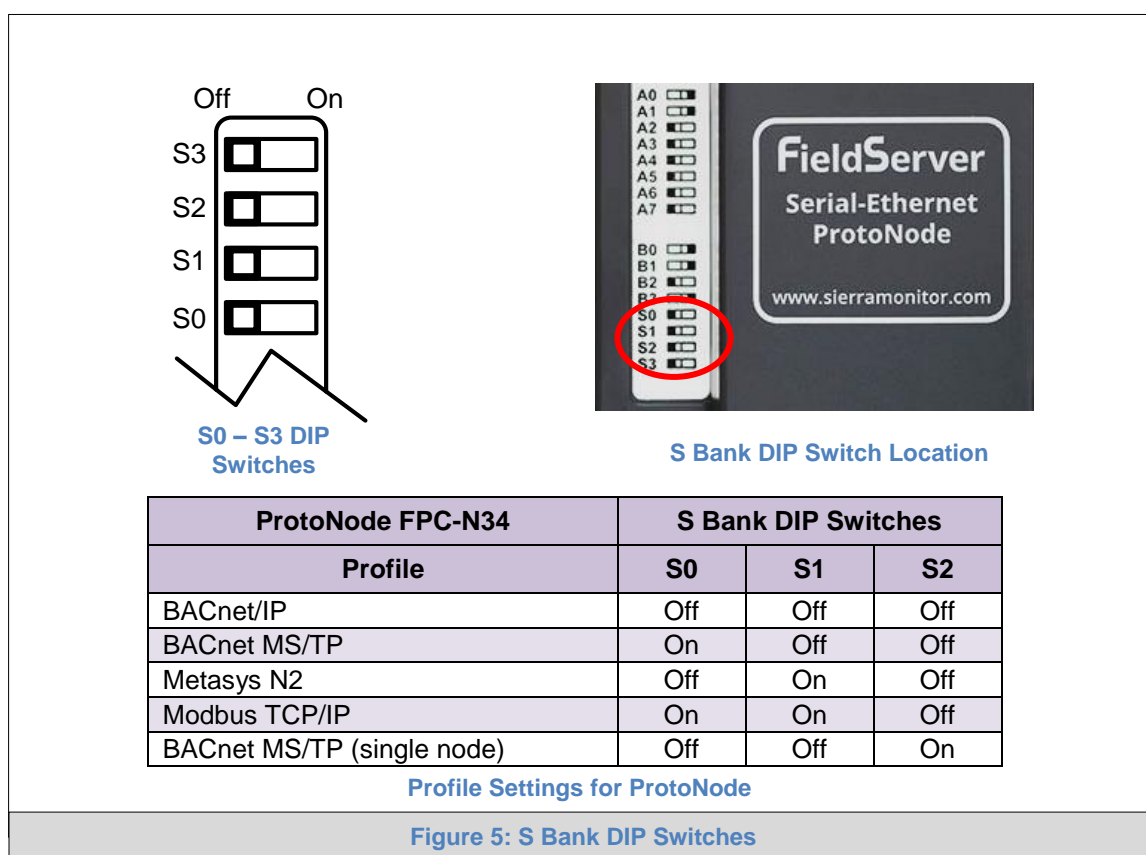

**NOTE:** When setting DIP Switches, ensure that power to the board is OFF.

## 3.4.2 Enabling Auto-Discovery

**NOTE:** If Modbus TCP/IP was selected in Section 3.4.1 for the Field/BMS protocol, skip this section. Auto-Discovery is NOT used for Modbus TCP/IP.

- The S3 DIP switch is used to both enable Auto-Discovery of known devices attached to the ProtoNode, and to save the recently discovered configuration.
  - See the table in [Figure 6](#) for the switch setting to enable Auto-Discovery.
  - If the ProtoNode is being installed for the first time, set S3 to the ON position to enable Auto-Discovery.
  - The ON position is when the DIP switches are set closest to the inside of the box.

S3 DIP Switch Auto-Discovery Mode	S3
Auto-Discovery ON – Build New Configuration	On
Auto-Discover OFF – Save Current Configuration	Off
<a href="#">Figure 6: S3 DIP Switch setting for Auto Discovering Devices</a>	

### 3.5 BMS Network Settings: MAC Address, Device Instance and Baud Rate

#### 3.5.1 BACnet MS/TP (FPC-N34): Setting the MAC Address for BMS Network

- Only 1 MAC address is set for ProtoNode regardless of how many devices are connected to ProtoNode.
- Set the BACnet MS/TP MAC addresses of the ProtoNode to a value between 1 to 127 (MAC Master Addresses); this is so that the BMS Front End can find the ProtoNode via BACnet auto discovery.

**NOTE: Never set a BACnet MS/TP MAC Address from 128 to 255.** Addresses from 128 to 255 are Slave Addresses and can not be discovered by BMS Front Ends that support auto discovery of BACnet MS/TP devices.

- Set “A” bank DIP switches A0 – A7 to assign a MAC Address to the ProtoNode for BACnet MS/TP.
- Refer to [Appendix C.1](#) for the complete range of MAC Addresses and DIP switch settings.

**NOTE: When using Metasys N2 and Modbus TCP/IP, the A Bank of DIP switches are disabled and not used. They should be set to OFF.**

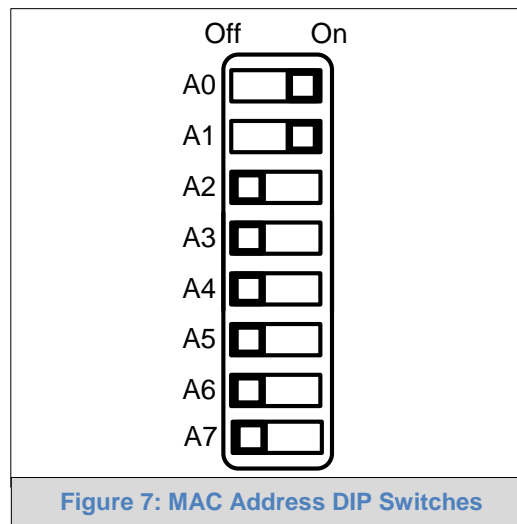


Figure 7: MAC Address DIP Switches

**NOTE:** When setting DIP Switches, ensure that power to the board is OFF.

### 3.5.2 BACnet MS/TP and BACnet/IP (FPC-N34): Setting the Device Instance

- The A Bank of DIP switches are used for two purposes:
  - For BACnet MS/TP, they are used to set the BACnet MS/TP MAC address (**Section 3.5.1**)
  - For both BACnet MS/TP and BACnet/IP, they are also used to determine the BACnet Device Instance values
- The BACnet Device Instance can range from 1 to 4,194,303.
- The BACnet device instances are calculated by taking the Node\_Offset (default is 50,000) found in Web Configurator (**Section 6**) and adding it to the value of the A Bank DIP switches. When more than one device is connected to the ProtoNode, the subsequent BACnet Device Instance values are generated sequentially from the first/previous device.

For example:

**Device Instance = Node\_Offset + A Bank DIP switch value**

- Default Node\_Offset value = 50,000
- A Bank DIP switch value = 11

**Then the Device Instance values are:**

- Device 1 Instance = 50,011
- Device 2 Instance will then be 50,011(Device Instance 1) **+1** = 50,012
- Device 3 Instance will then be 50,012 (Device Instance 2) **+1** = 50,013

## 3.5.3 BACnet MS/TP (FPC-N34): Setting the Baud Rate for BMS Network

- “B” bank DIP switches B0 – B3 can be used to set the Field baud rate of the ProtoNode to match the baud rate required by the Building Management System for BACnet MS/TP.
- The baud rate on ProtoNode for Metasys N2 is set for 9600. “B” bank DIP switches B0 – B3 are disabled for Metasys N2 on ProtoNode FPC-N34.
- “B” bank DIP switches B0 – B3 are disabled on ProtoNode FPC-N35 (LonWorks).

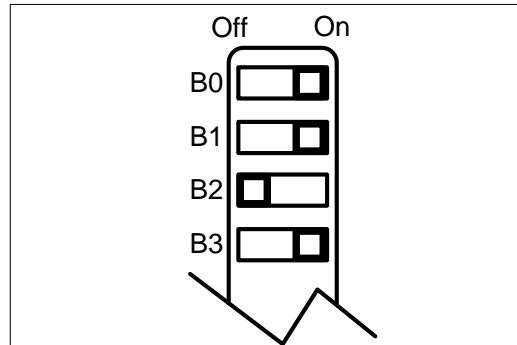


Figure 8: BMS Baud Rate DIP Switches

### 3.5.3.1 Baud Rate DIP Switch Selection

Baud	B0	B1	B2	B3
9600	On	On	On	Off
19200	Off	Off	Off	On
<b>38400*</b>	<b>On</b>	<b>On</b>	<b>Off</b>	<b>On</b>
57600	Off	Off	On	On
76800	On	Off	On	On

Figure 9: BMS Baud Rate

\* Factory default setting = 38400

## 4 INTERFACING PROTONODE TO DEVICES

### 4.1 ProtoNode FPC-N34 and FPC-N35 Showing Connection Ports

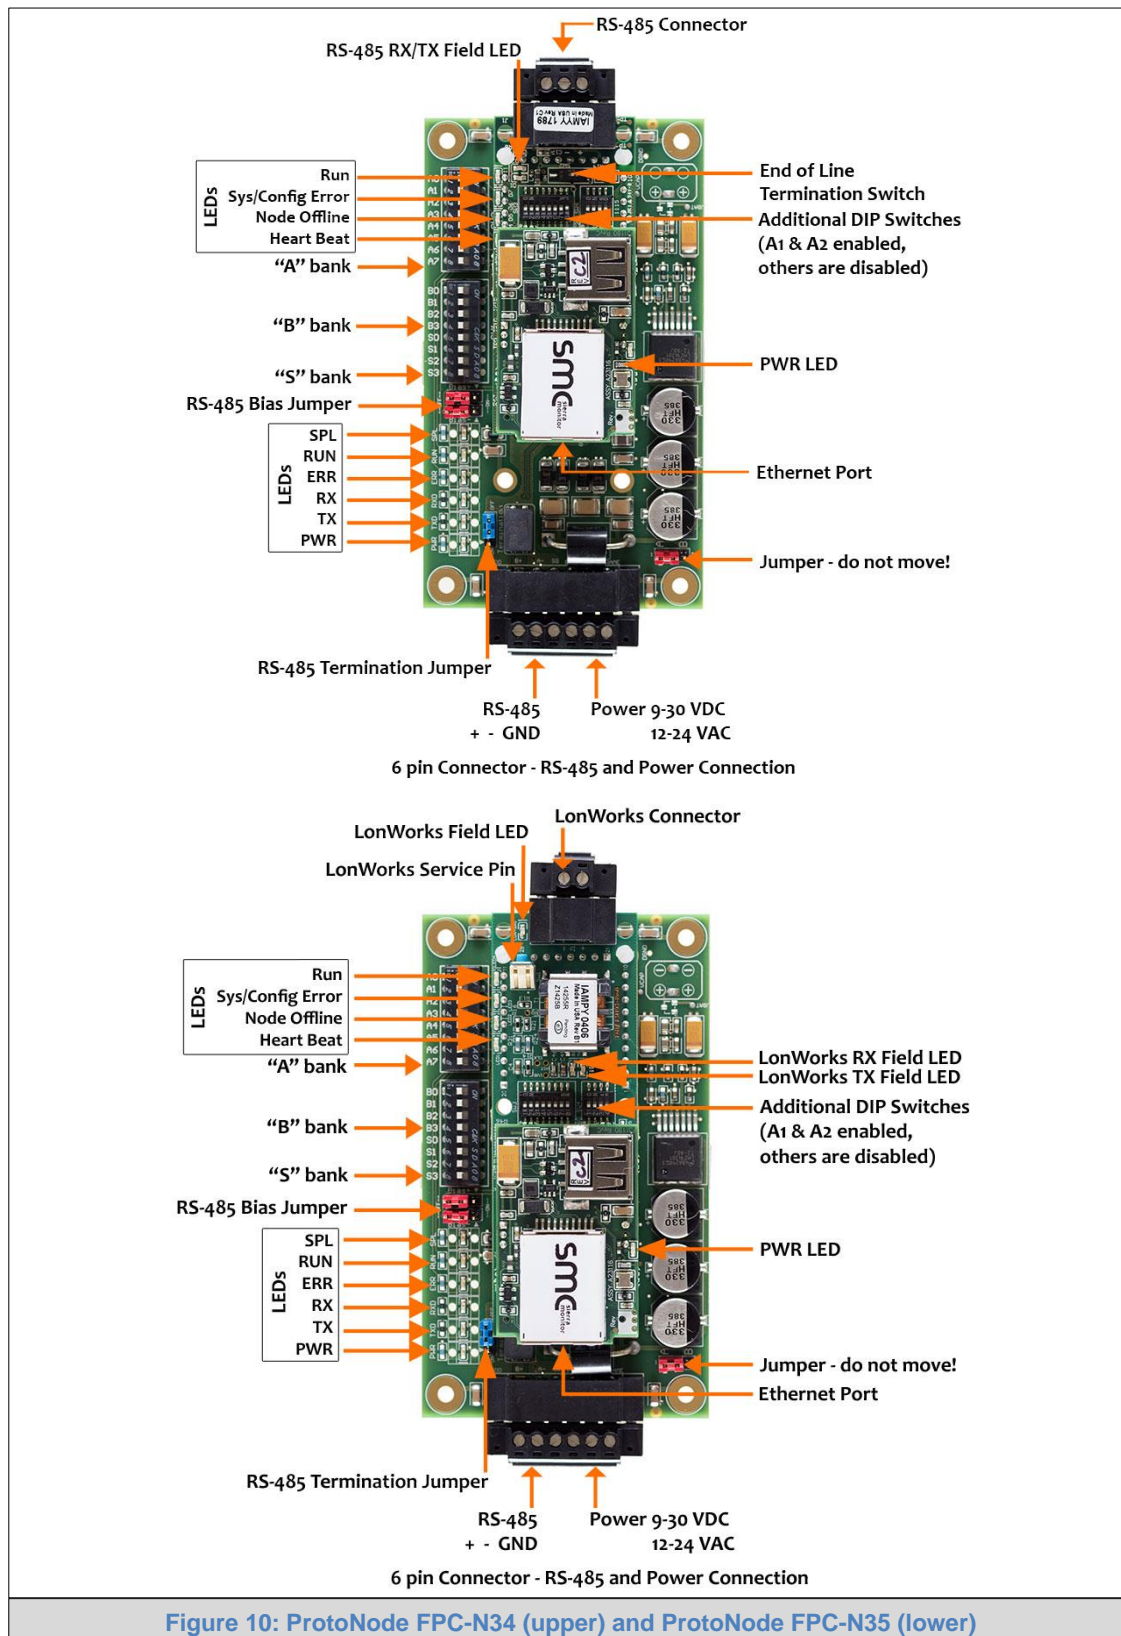



Figure 10: ProtoNode FPC-N34 (upper) and ProtoNode FPC-N35 (lower)

## 4.2 Device Connections to ProtoNode

### ProtoNode 6 Pin Phoenix connector for RS-485 Devices

#### 4.2.1 Connecting the Intac Controller's RS-485 DB9 port or Terminal block to the ProtoNode's Phoenix 6 pin connector


- Connect Intac Controller's (RS485+) J3 pin 1 to ProtoNode's pin 1 (RS485+) on the Phoenix 6 pin connector.
- Connect Intac Controller's (RS485-) J3 pin 2 to ProtoNode's pin 2 (RS485-) on the Phoenix 6 pin connector.
- Ground between the Intac Controller's J3 Pin 3 and the ProtoNode's pin 3 (GND) on the Phoenix 6 pin connector, use standard grounding principles

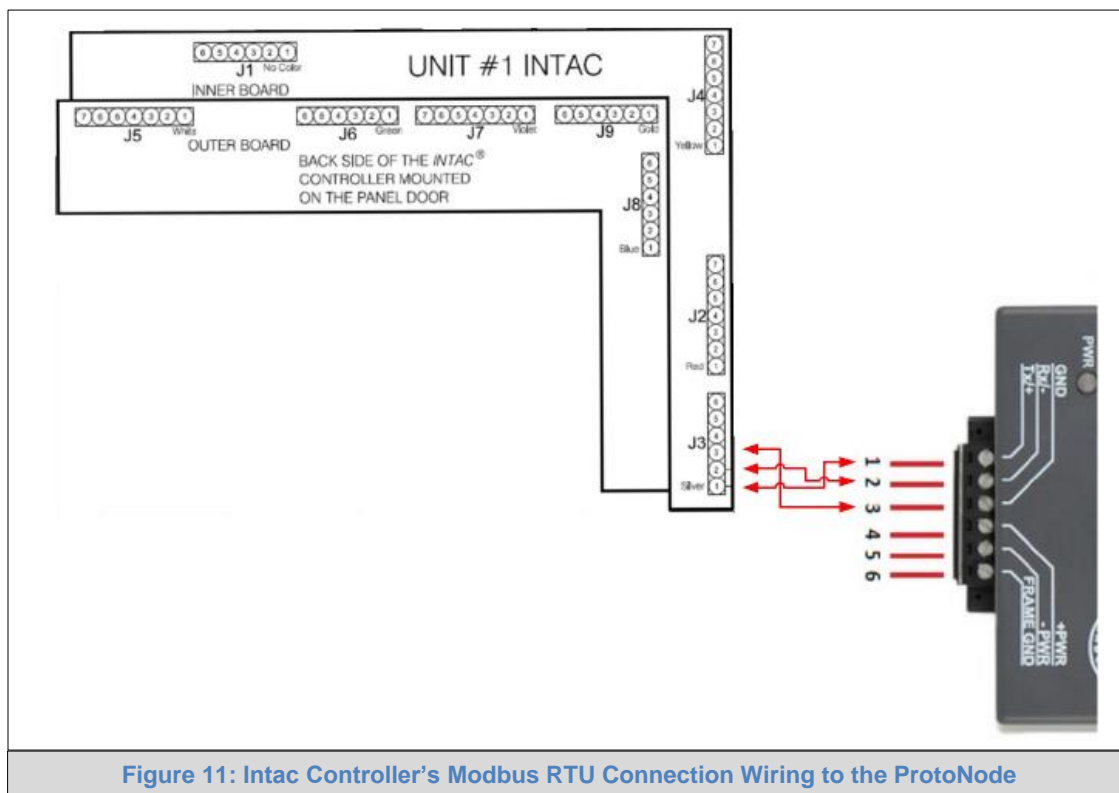




#### 4.2.2 Biasing the Modbus RS-485 Device Network

- An RS-485 network with more than one device needs to have biasing to ensure proper communication. The biasing only needs to be done on one device.
- The ProtoNode has 510 Ohm resistors that can be used to set the biasing. The ProtoNode's default positions from the factory for the Biasing jumpers are OFF.
- The OFF position is when the 2 RED biasing jumpers straddle the 4 pins closest to the outside of the board of the ProtoNode. (**Figure 12**)
- **Only turn biasing ON:**
  - **IF the BMS cannot see more than one device connected to the ProtoNode**
  - **AND all the settings (Modbus COM settings, wiring, and DIP switches) have been checked.**
- To turn biasing ON, move the 2 RED biasing jumpers to straddle the 4 pins closest to the inside of the board of the ProtoNode.

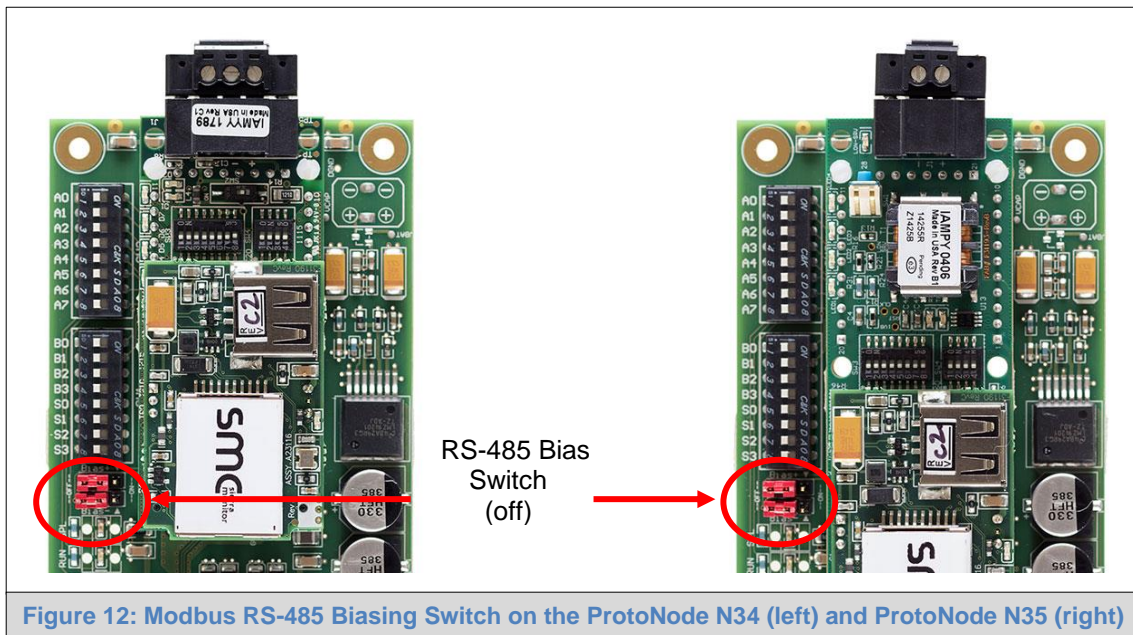



#### 4.2.3 End of Line Termination Switch for the Modbus RS-485 Device Network

- On long RS-485 cabling runs, the RS-485 trunk must be properly terminated at each end.
- The ProtoNode has an End of Line (EOL) blue jumper. The default setting for this Blue EOL switch is OFF with the jumper straddling the pins closest to the inside of the board of the ProtoNode.
  - On short cabling runs the EOL switch does not need to be turned ON.
- **If the ProtoNode is placed at one of the ends of the trunk, set the blue EOL jumper to the ON position straddling the pins closest to the outside of the board of the ProtoNode.**
- **Always leave the single Red Jumper in the A position (default factory setting).**

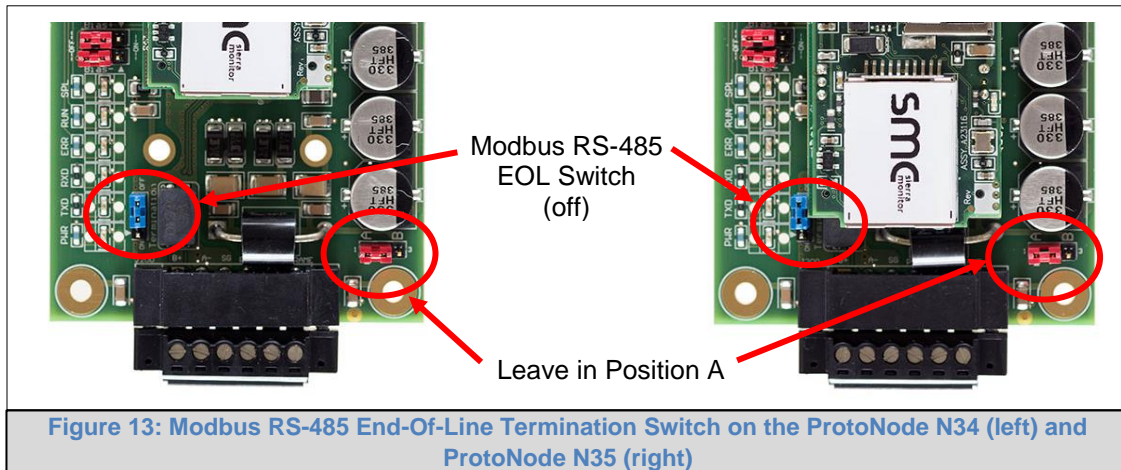

#### 4.3 BACnet MS/TP or Metasys N2 (FPC-N34): Wiring Field Port to RS-485 Network

- Connect the BACnet MS/TP or Metasys N2 RS-485 network wires to the 3-pin RS-485 connector on ProtoNode FPC-N34. (**Figure 14**)
  - The RS-485 GND (Pin 3) is not typically connected
- See **Section 5.2** for information on connecting to BACnet/IP network.
- If the ProtoNode is the last device on the BACnet MS/TP or Metasys N2 trunk, then the End-Of-Line Termination Switch needs to be enabled. (**Figure 15**)
  - The default setting from the factory is OFF (switch position = right side)
  - To enable the EOL Termination, turn the EOL switch ON (switch position = left side)

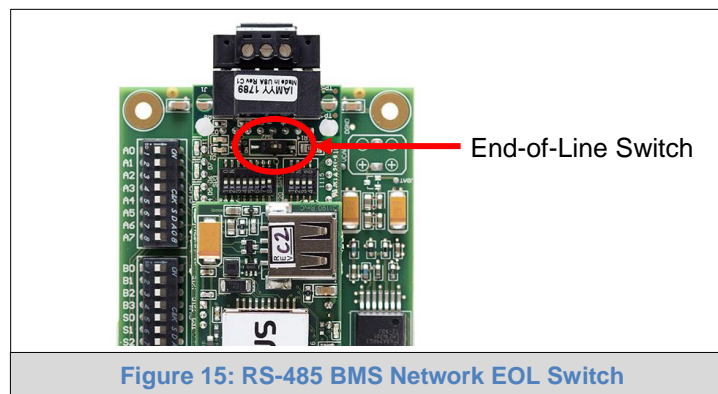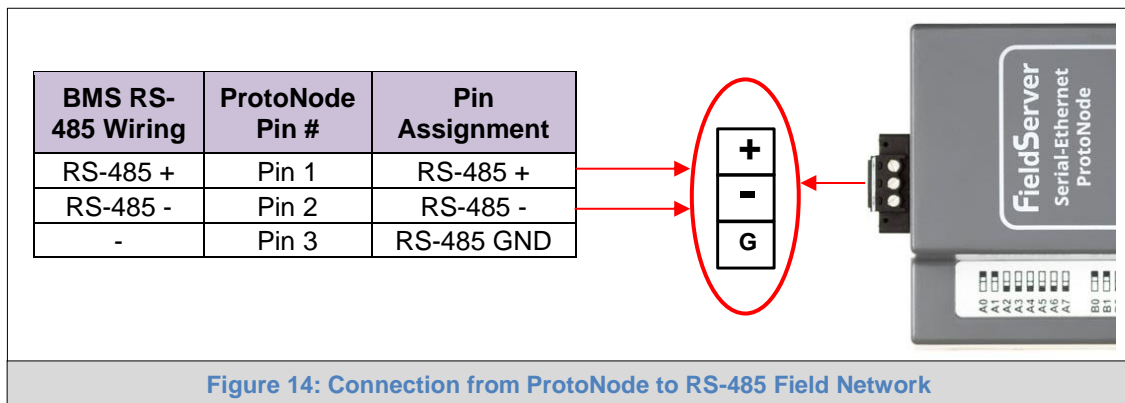

#### 4.4 LonWorks (FPC-N35): Wiring LonWorks Devices to the LonWorks Terminal

- Wire the LonWorks device network to the ProtoNode LonWorks Terminal.
  - Use approved cable per the FT-10 installation guidelines
- LonWorks has no polarity.




## 4.5 Power-Up ProtoNode

Check power requirements in the table below:

Power Requirement for ProtoNode External Gateway			
	Current Draw Type		
ProtoNode Family	12VDC/VAC	24VDC/VAC	30VDC
FPC – N34 (Typical)	170mA	100mA	80mA
FPC – N34 (Maximum)	240mA	140mA	100mA
FPC – N35 (Typical)	210mA	130mA	90mA
FPC – N35 (Maximum)	250mA	170mA	110mA
<b>NOTE:</b> These values are 'nominal' and a safety margin should be added to the power supply of the host system. A safety margin of 25% is recommended.			
Figure 17: Required current draw for the ProtoNode			

Apply power to ProtoNode as show below in [Figure 18](#). Ensure that the power supply used complies with the specifications provided in [Appendix D.1](#).

- ProtoNode accepts either 9-30VDC or 12-24 VAC on pins 4 and 5.
- **Frame GND should be connected.**

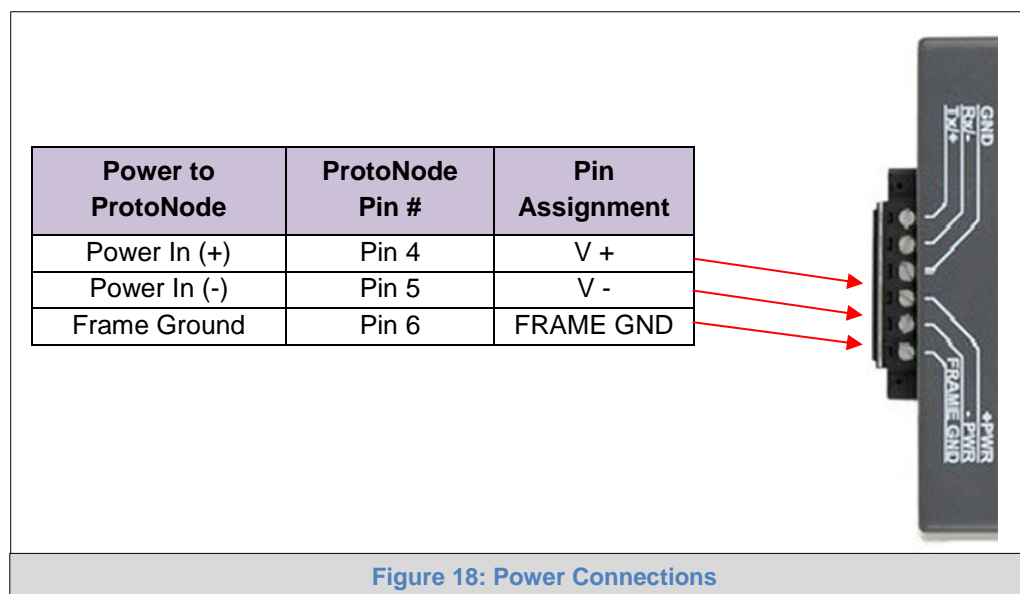

## 4.5.1 Auto-Discovery: After Completion – Turn Off to Save Configuration

**NOTE:** If Modbus TCP/IP was selected in Section 3.4.1 for the Field/BMS protocol, skip this section. Auto-Discovery is NOT used for Modbus TCP/IP.

The S3 DIP Switch for Enabling Auto-Discovery should have been set in Section 3.4.2 before applying power to the ProtoNode. **Do not** Enable Auto-Discovery when the unit is powered.

- When power is applied to a ProtoNode that is set to Enable Auto-Discovery, it will take 3 minutes to complete the discovery of all of the RS-485 devices attached to the ProtoNode.
- The “TX” LED will flash during Auto-Discovery. The “TX” LED will stop flashing when completed.
- **Once the ProtoNode has discovered all of the RS-485 devices, set the S3 DIP switch to the OFF position to save the current configuration.**
- Then turn the power to the ProtoNode back ON. The stored configuration is now loaded.

S3 DIP Switch Auto-Discovery Mode	S3
Auto-Discovery ON – Build New Configuration	On
Auto-Discover OFF – Save Current Configuration	Off

Figure 19: S3 DIP Switch setting for Auto Discovering Devices


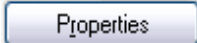
## 5 BACNET/IP OR MODBUS TCP/IP: CHANGE THE PROTONODE IP ADDRESS

### 5.1 Connect the PC to ProtoNode via the Ethernet Port






- Connect a CAT5 Ethernet cable (Straight through or Cross-Over) between the local PC and ProtoNode.
- The Default IP Address of ProtoNode is **192.168.1.24**, Subnet Mask is **255.255.255.0**. If the PC and ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network.
- For Windows XP:

Go to  >  Control Panel >  Network Connections

Right-click on Local Area Connection > Properties

Highlight ☒  Internet Protocol (TCP/IP) > 

- For Windows 7 or later:

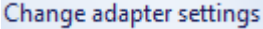Go to  >  Control Panel >  Network and Internet  
>  Network and Sharing Center > 


Right-click on Local Area Connection > Properties

Highlight ☒  Internet Protocol Version 4 (TCP/IPv4) > 

- For Windows XP and Windows 7, use the following IP Address:

☒ Use the following IP address:

IP address:	192 . 168 . 1 . 11
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	.

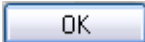- Click  twice.

## 5.2 BACnet/IP and Modbus TCP/IP: Setting IP Address for Field Network

- After setting a local PC on the same subnet as the ProtoNode (**Section 5.1**), open a web browser on the PC and enter the IP Address of the ProtoNode; the default address is 192.168.1.24.


**NOTE:** If the IP Address of the ProtoNode has been changed by previous configuration, the assigned IP Address can be discovered using the FS Toolbox utility. See [Appendix A.1](#) for instructions.

- The Web Configurator is displayed as the landing page. (**Figure 20**)

**NOTE:** Below the “Active profiles” heading are listed the profiles for connected devices. If no profiles are present, then the wiring, baud rate, and DIP switch settings must be checked, because there is a problem with device communications. All the active profiles must show the correct Node-ID’s before proceeding.

**NOTE:** If multiple devices are connected to the ProtoNode, set the BACnet Virtual Server Nodes field to “Yes”; otherwise leave the field on the default “No” setting.

- To access the FS-GUI, click on the “Diagnostics & Debugging” button in the bottom right side of the page.

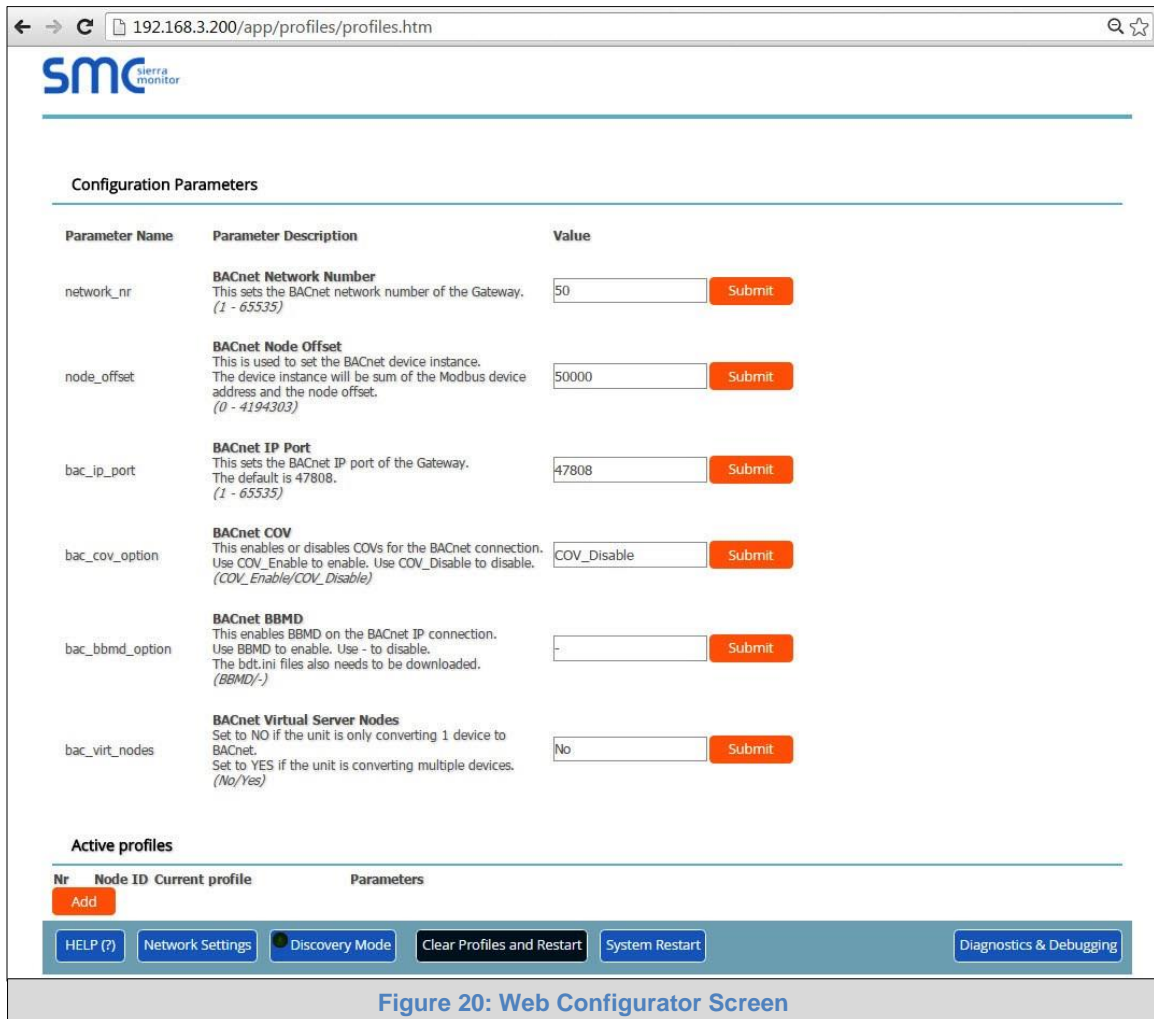

The screenshot shows a web browser window with the URL 192.168.3.200/app/profiles/profiles.htm. The page displays the SMC Sierra Monitor logo and a section titled "Configuration Parameters". This section contains a table with columns for Parameter Name, Parameter Description, and Value. The parameters are: network\_nr (BACnet Network Number, value 50), node\_offset (BACnet Node Offset, value 50000), bac\_ip\_port (BACnet IP Port, value 47808), bac\_cov\_option (BACnet COV, value COV\_Disable), bac\_bbmd\_option (BACnet BBMD, value -), and bac\_virt\_nodes (BACnet Virtual Server Nodes, value No). Each parameter has a "Submit" button next to its value field. Below the configuration parameters is a section titled "Active profiles" with a table showing columns for Nr, Node ID, Current profile, and Parameters. There is an "Add" button below the table. At the bottom of the page, there is a navigation bar with buttons for HELP (?), Network Settings, Discovery Mode, Clear Profiles and Restart, System Restart, and Diagnostics & Debugging.

Parameter Name	Parameter Description	Value
network_nr	<b>BACnet Network Number</b> This sets the BACnet network number of the Gateway. (1 - 65535)	50 <input type="button" value="Submit"/>
node_offset	<b>BACnet Node Offset</b> This is used to set the BACnet device instance. The device instance will be sum of the Modbus device address and the node offset. (0 - 4194303)	50000 <input type="button" value="Submit"/>
bac_ip_port	<b>BACnet IP Port</b> This sets the BACnet IP port of the Gateway. The default is 47808. (1 - 65535)	47808 <input type="button" value="Submit"/>
bac_cov_option	<b>BACnet COV</b> This enables or disables COVs for the BACnet connection. Use COV_Enable to enable. Use COV_Disable to disable. (COV_Enable/COV_Disable)	COV_Disable <input type="button" value="Submit"/>
bac_bbmd_option	<b>BACnet BBMD</b> This enables BBMD on the BACnet IP connection. Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded. (BBMD/-)	- <input type="button" value="Submit"/>
bac_virt_nodes	<b>BACnet Virtual Server Nodes</b> Set to NO if the unit is only converting 1 device to BACnet. Set to YES if the unit is converting multiple devices. (No/Yes)	No <input type="button" value="Submit"/>

**Active profiles**

Nr	Node ID	Current profile	Parameters
<input type="button" value="Add"/>			

Navigation bar:



- From the FS-GUI landing page, click on “Setup” to expand the navigation tree. Then select “Network Settings” to access the IP Settings menu. (Figure 21)

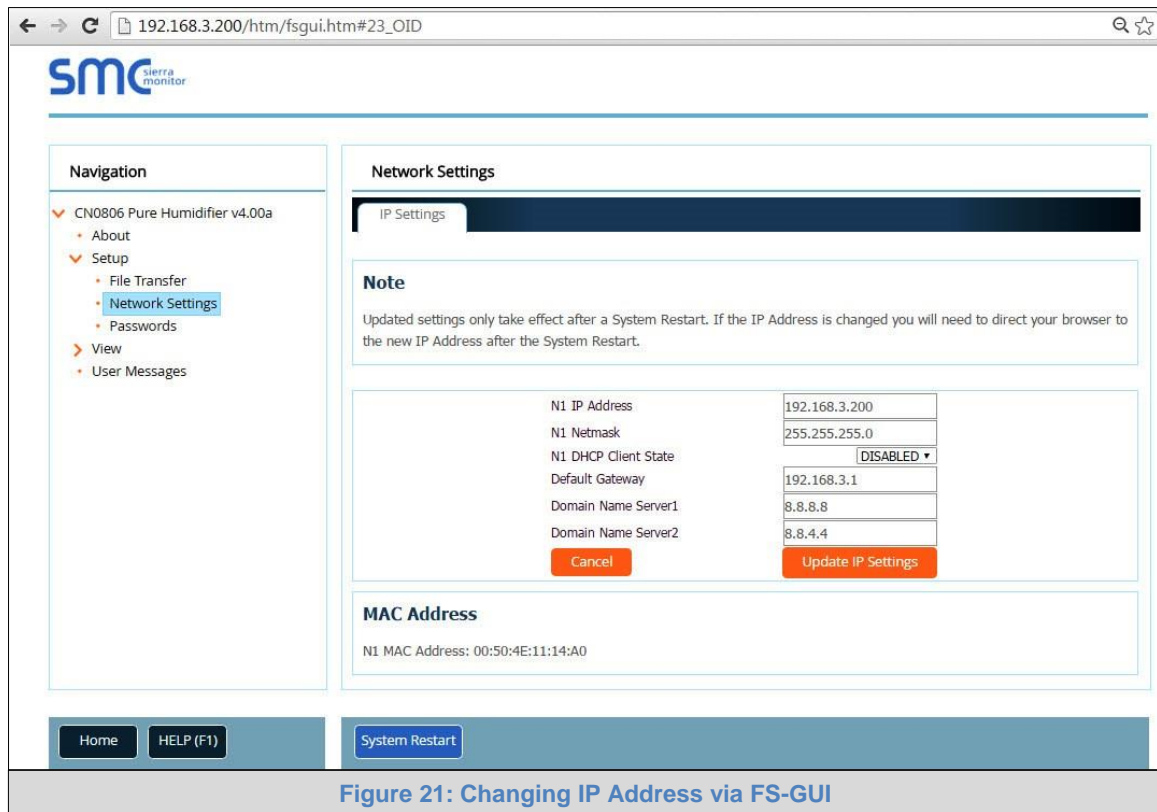


Figure 21: Changing IP Address via FS-GUI

- Modify the IP Address (N1 IP Address field) of the ProtoNode Ethernet port.
- If necessary, change the Netmask (N1 Netmask field).
- Type in a new Subnet Mask.
- If necessary, change the IP Gateway (Default Gateway field).
- Type in a new IP Gateway.

**NOTE:** If the ProtoNode is connected to a router, the IP Gateway of the ProtoNode should be set to the IP Address as the router.

- Reset ProtoNode.
- Unplug Ethernet cable from PC and connect it to the network hub or router.
- Record the IP Address assigned to the ProtoNode for future reference.**



## 6 BACNET MS/TP AND BACNET/IP: SETTING NODE\_OFFSET TO ASSIGN SPECIFIC DEVICE INSTANCES

- After setting a local PC to the same subnet as the ProtoNode (**Section 5.1**), open a web browser on the PC and enter the IP Address of the ProtoNode; the default address is 192.168.1.24.
  - If the IP Address of the ProtoNode has been changed by previous configuration, the assigned IP Address will need to be obtained from the network administrator.
  - The Web Configurator is displayed as the landing page. (**Figure 22**)
- Node\_Offset field shows the current value (default = 50,000).
  - The values allowed for a BACnet Device Instance can range from 1 to 4,194,303.
- To assign a specific Device Instance (or range); change the Node\_Offset value as needed using the calculation below:

$$\text{Device Instance (desired)} = \text{Node\_Offset} + \text{Modbus Node\_ID}$$

For example, if the desired Device Instance for the 1<sup>st</sup> device is 1,001 and the following is true:

- Device 1 has a Modbus Node-ID of 1
- Device 2 has a Modbus Node-ID of 22
- Device 3 has a Modbus Node-ID of 33

Then plug the 1<sup>st</sup> device information into the formula to find the desired Node\_Offset:

$$1,001 = \text{Node\_Offset} + 1$$

$$\text{➤ } 1,000 = \text{Node\_Offset}$$

Once the Node\_Offset value is input, it will be applied to all devices as shown below:

- Device 1 Instance = 1,000 + Modbus Node\_ID = 1,000 + 1 = 1,001
- Device 2 Instance = 1,000 + Modbus Node\_ID = 1,000 + 22 = 1,022
- Device 3 Instance = 1,000 + Modbus Node\_ID = 1,000 + 33 = 1,033

- Click “Submit” once the desired value is entered.

The screenshot shows the SMC Web Configurator interface. The browser address bar displays '192.168.3.200/app/profiles/profiles.htm'. The page title is 'Configuration Parameters'. Below the title is a table with columns 'Parameter Name', 'Parameter Description', and 'Value'. The parameters listed are:

Parameter Name	Parameter Description	Value
network_nr	BACnet Network Number This sets the BACnet network number of the Gateway. (1 - 65535)	50
node_offset	BACnet Node Offset This is used to set the BACnet device instance. The device instance will be sum of the Modbus device address and the node offset. (0 - 4194303)	50000
bac_ip_port	BACnet IP Port This sets the BACnet IP port of the Gateway. The default is 47808. (1 - 65535)	47808
bac_cov_option	BACnet COV This enables or disables COVs for the BACnet connection. Use COV_Enable to enable. Use COV_Disable to disable. (COV_Enable/COV_Disable)	COV_Disable
bac_bsm_option	BACnet BSM This enables BSM on the BACnet IP connection. Use BSM_Enable to enable. Use - to disable. The bsm.in files also needs to be downloaded. (BSM_Enable/-)	-
bac_virt_nodes	BACnet Virtual Server Nodes Set to NO if the unit is only converting 1 device to BACnet. Set to YES if the unit is converting multiple devices. (No/Yes)	No

Below the configuration parameters is a section titled 'Active profiles'. It contains a table with columns 'Nr', 'Node ID', 'Current profile', and 'Parameters'. The table lists three active profiles:

Nr	Node ID	Current profile	Parameters
1	1	BAC_IP_Intac	Remove
2	22	BAC_IP_Intac	Remove
3	33	BAC_IP_Intac	Remove

At the bottom of the page, there are buttons for 'Add', 'HELP (?)', 'Network Settings', 'Discovery Mode', 'Clear Profiles and Restart', 'System Restart', and 'Diagnostics & Debugging'.

Figure 22: Web Configurator Screen with Active Profiles

## **7 HOW TO START THE INSTALLATION OVER: CLEARING PROFILES**

- After setting a local PC to the same subnet as the ProtoNode (**Section 5.1**), open a web browser on the PC and enter the IP Address of the ProtoNode; the default address is 192.168.1.24.
- If the IP Address of the ProtoNode has been changed by previous configuration, the assigned IP Address will need to be obtained from the network administrator.
- The Web Configurator is displayed as the landing page.
- **At the bottom-left of the page, click the “Clear Profiles and Restart” button.**
- Once restart is complete, all past profiles discovered and/or added via Web configurator are deleted. The unit can now be reinstalled.

## 8 LONWORKS (FPC-N35): COMMISSIONING PROTONODE ON A LONWORKS NETWORK

Commissioning may only be performed by the LonWorks administrator.

### 8.1 Commissioning ProtoNode FPC-N35 on a LonWorks Network

During the commissioning process, the LonWorks Administrator will prompt the User to hit the Service Pin on the ProtoNode FPC-N35 at a specific point (this step occurs at different points of the commissioning process for each LonWorks Network Management Tool).


- If an XIF file is required, see steps in **Section 8.1.1** to generate XIF.




Figure 23: LonWorks Service Pin Location

#### 8.1.1 Instructions to Download XIF File from ProtoNode FPC-N35 Using Browser


- Connect a CAT5 Ethernet cable (Straight through or Cross-Over) between the PC and ProtoNode.
- The Default IP Address of ProtoNode is **192.168.1.24**, Subnet Mask is **255.255.255.0**. If the PC and ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network.
- For Windows XP:

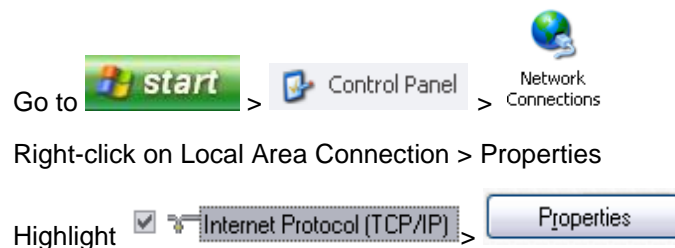

- For Windows 7 or later:

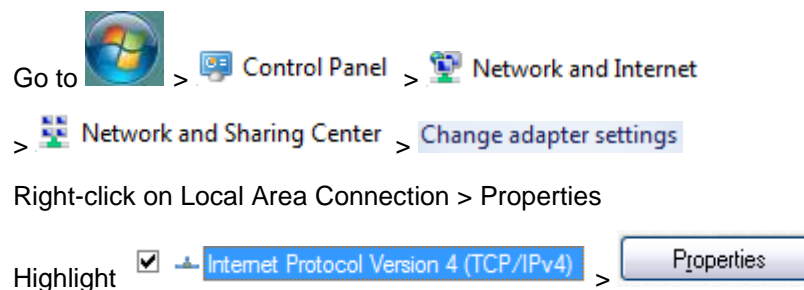

- For Windows XP and Windows 7, use the following IP Address:

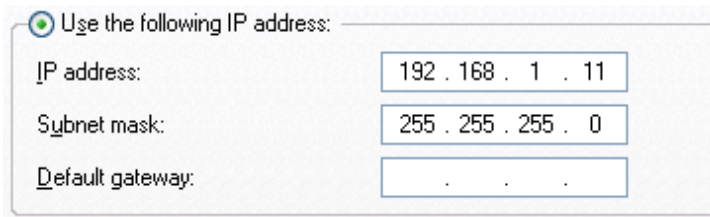

- Click **OK** twice.
- Open a web browser and go to the following address: [IP Address of ProtoNode]/fserver.xif.
  - Example: 192.168.1.24/fserver.xif
- If the web browser prompts to save the file, save the file onto the local PC. If the web browser displays the xif file as a web page, save the file onto the local PC as "fserver.xif".


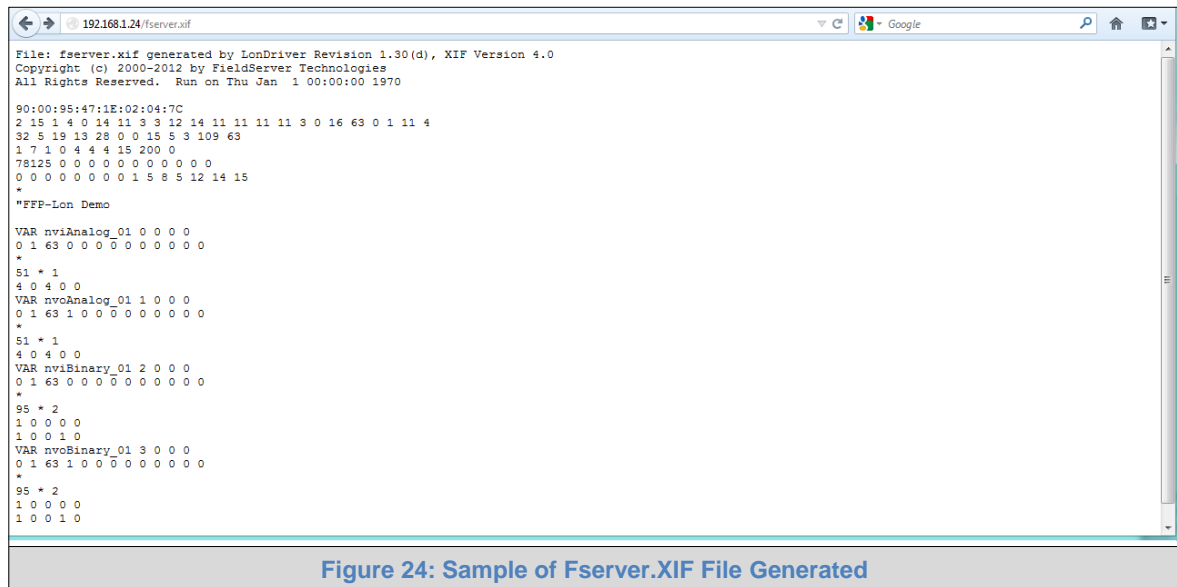


Figure 24: Sample of Fserver.XIF File Generated

## 9 BACNET EXPLORER

A typical working example of a BACnet Explorer on a BACnet Network:

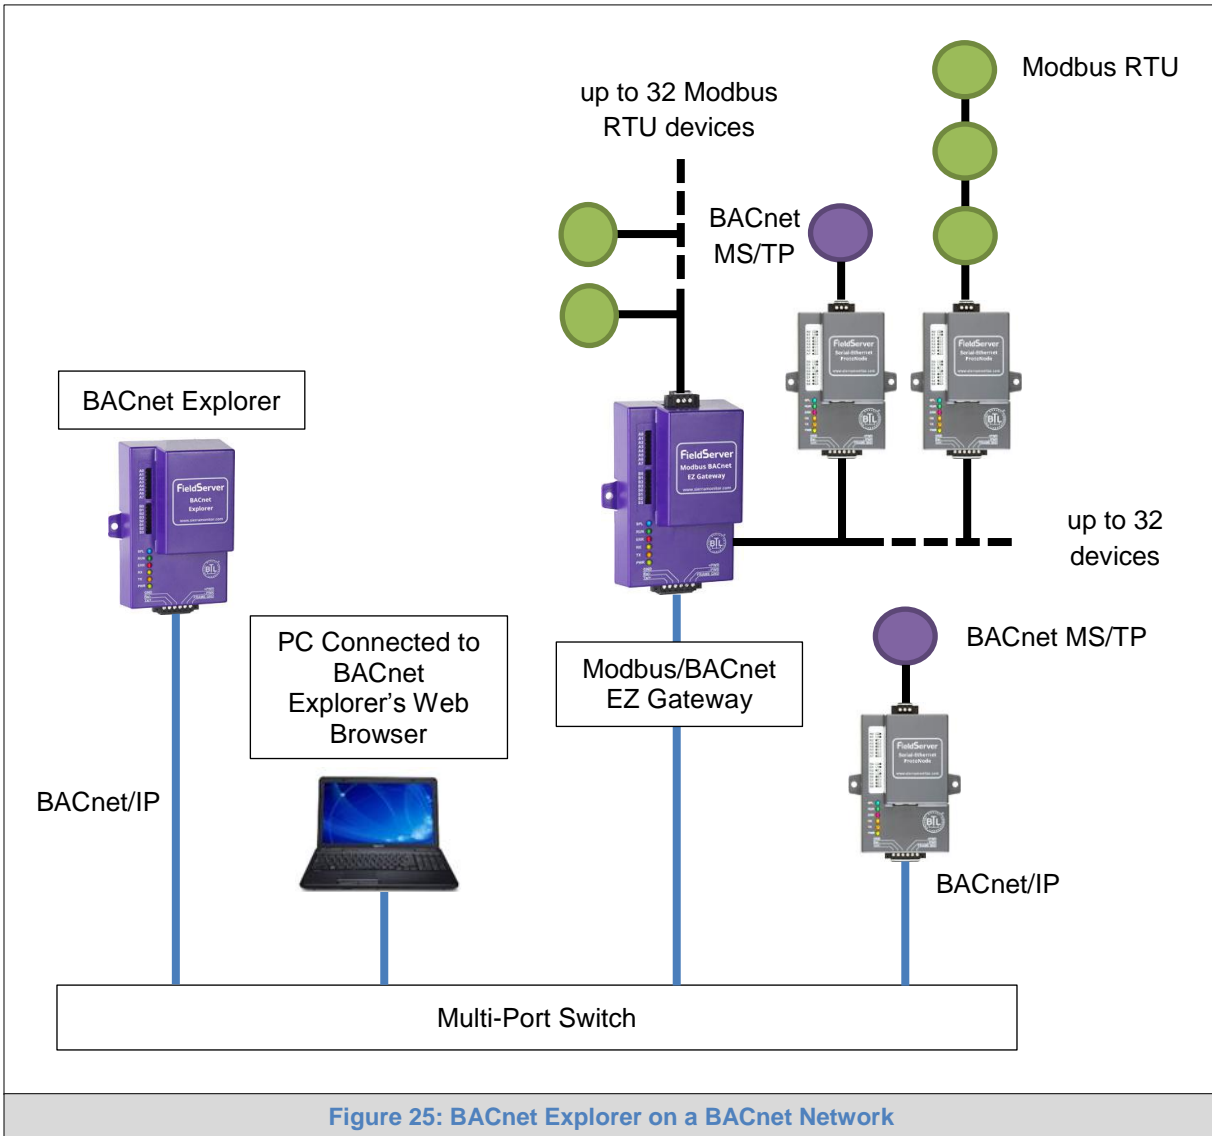


For additional details related to the BACnet Explorer, go to the Sierra Monitor Resource Center ([www.sierramonitor.com/customer-care/resource-center](http://www.sierramonitor.com/customer-care/resource-center)) and download the BACnet Explorer Start-up Guide.

For purchasing information, look up the BACnet Explorer page on the Sierra Monitor website ([www.sierramonitor.com/connect/all-protocol-gateway-products/bacnet-explorer](http://www.sierramonitor.com/connect/all-protocol-gateway-products/bacnet-explorer)) and click on the "BUY NOW" tab.


## Appendix A. Troubleshooting


### Appendix A.1. Lost or Incorrect IP Address

- Ensure that FieldServer Toolbox is loaded onto the local PC. If not, download FieldServer-Toolbox.zip on the Sierra Monitor web page, under Customer Care-Resource Center, Software Downloads:  
<http://www.sierramonitor.com/customer-care/resource-center?filters=software-downloads>
- Extract the executable file and complete the installation.

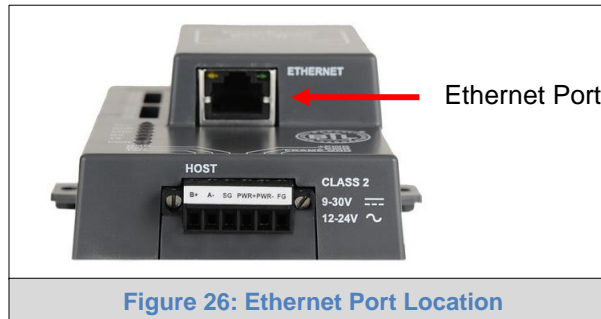

- Disable any wireless Ethernet adapters on the PC/Laptop.
- Disable firewall and virus protection software if possible.
- Connect a standard CAT5 Ethernet cable between the PC and ProtoNode.
- Double click on the FS Toolbox Utility.
- Check IP Addresses from the Device listings.

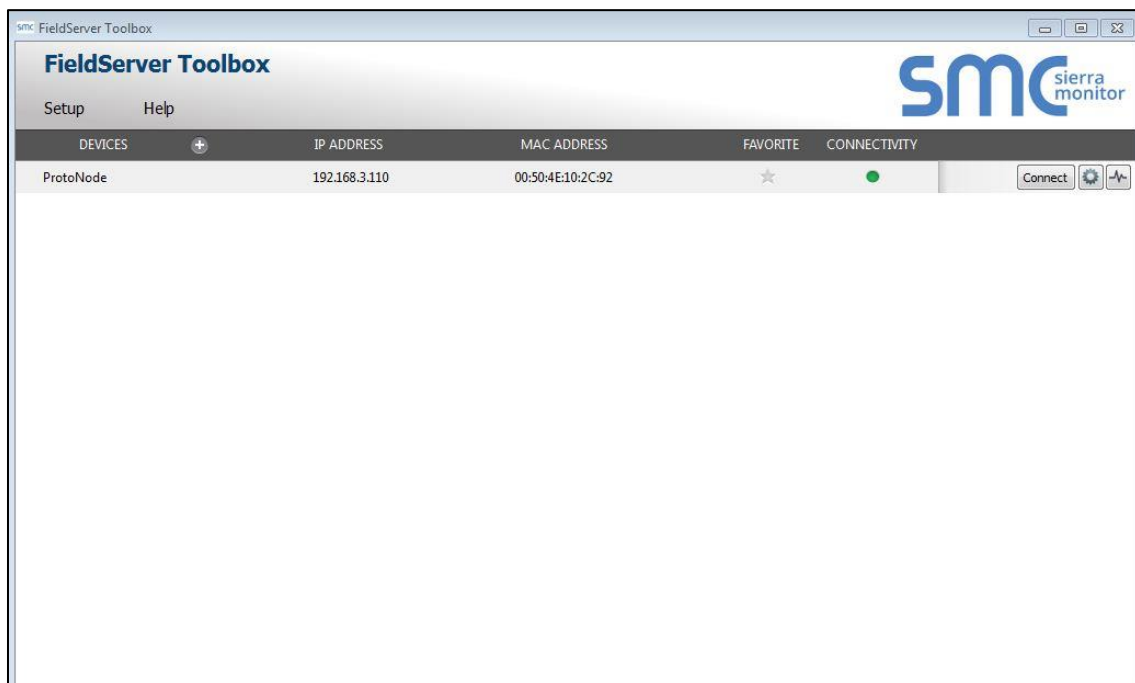

- Correct IP Address(es) by right clicking the settings icon  and changing the IP Address.

## Appendix A.2. Viewing Diagnostic information

- Type the IP Address of the ProtoNode into the web browser or use the FieldServer Toolbox to connect to the ProtoNode.
- Click on Diagnostics and Debugging Button, then click on view, and then on connections.
- If there are any errors showing on the Connection page, refer to [Appendix A.3](#) for the relevant wiring and settings.

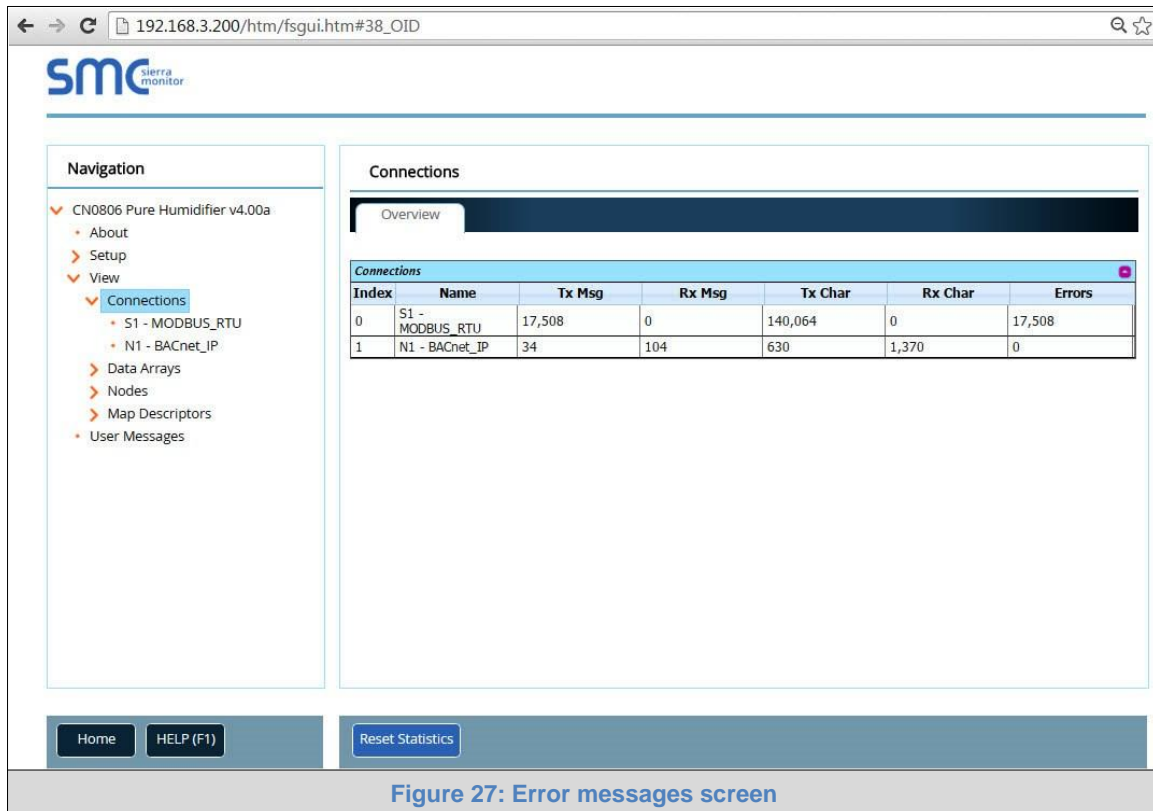


Figure 27: Error messages screen

### Appendix A.3. Checking Wiring and Settings


- No COMS on Modbus RTU side. If Tx/Rx are not flashing rapidly then there is a COM issue on the Modbus side. To fix this problem, check the following:
  - Visual observations of LEDs on ProtoNode ([Appendix A.4](#))
  - Check baud rate, parity, data bits, stop bits
  - Check Modbus device address
  - Verify wiring
  - Verify Modbus device is connected to the same subnet as the ProtoNode
  - Verify the Modbus device was discovered in Web Configurator ([Section 5.2](#))
- Field COM problems:
  - If Ethernet protocols are used, observe Ethernet LEDs on the ProtoNode ([Appendix A.4](#))
  - Check dipswitch settings (using correct baud rate and device instance)
  - Verify IP Address setting
  - Verify wiring

**NOTE:** If the problem still exists, a Diagnostic Capture needs to be taken and sent to technical support. ([Appendix A.5](#))




#### Appendix A.4. LED Diagnostics for Communications Between ProtoNode and Devices


See the diagram below for ProtoNode FPC-N34 and FPC-N35 LED Locations.

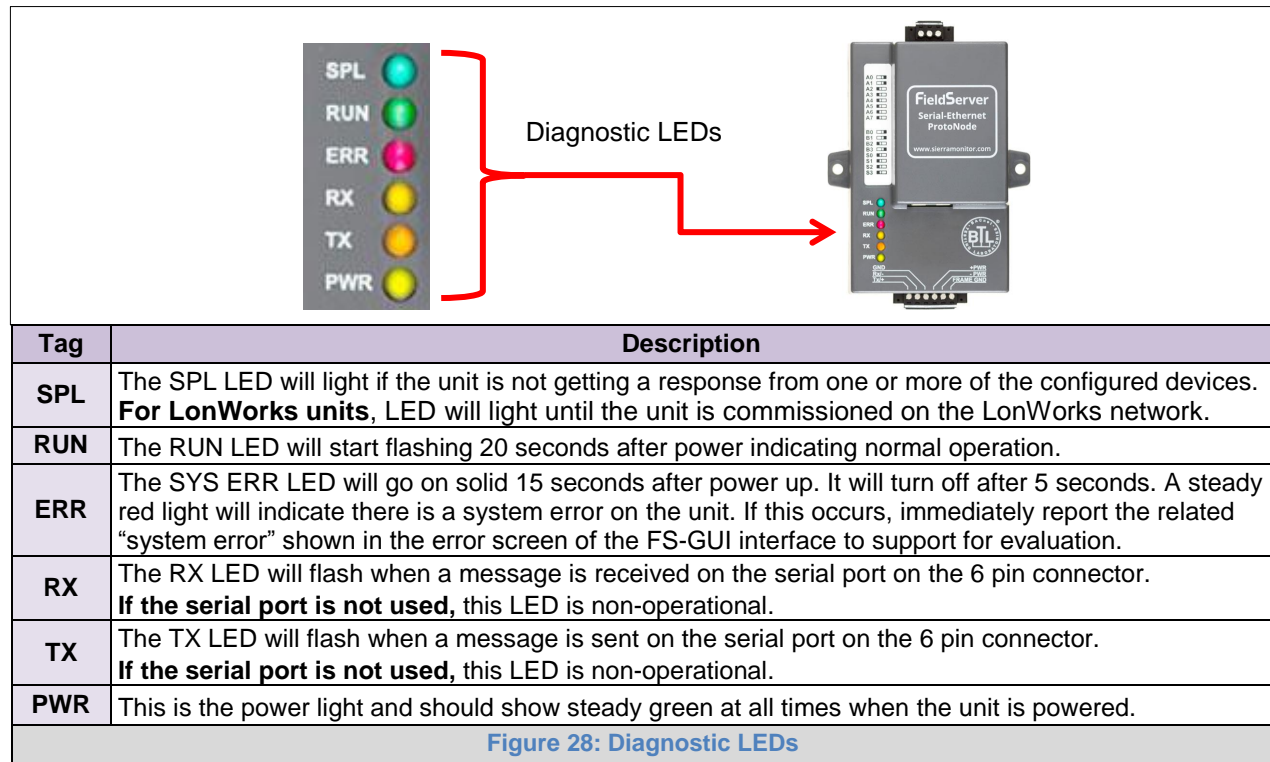


## Appendix A.5. Taking Diagnostic Capture with the FieldServer Toolbox


- Once the Diagnostic Capture is complete, email it to [info@purehumidifier.com](mailto:info@purehumidifier.com). The Diagnostic Capture will accelerate diagnosis of the problem.
- Ensure that FieldServer Toolbox is Loaded on the PC that is currently being used, or download FieldServer-Toolbox.zip on the Sierra Monitor Corporation web page, under Customer Care-Resource Center, Software Downloads:  
<http://www.sierramonitor.com/customer-care/resource-center?filters=software-downloads>
- Extract the executable file and complete the installation.

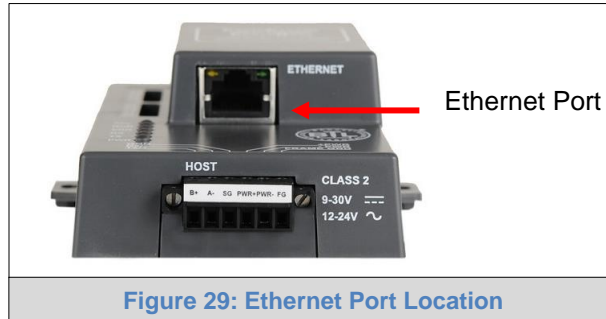

- Disable any wireless Ethernet adapters on the PC/Laptop.
- Disable firewall and virus protection software if possible.
- Connect a standard Cat5 Ethernet cable between the PC and ProtoNode.
- Double click on the FS Toolbox Utility.
- **Step 1: Take a Log**
  - Click on the diagnose icon  of the desired device

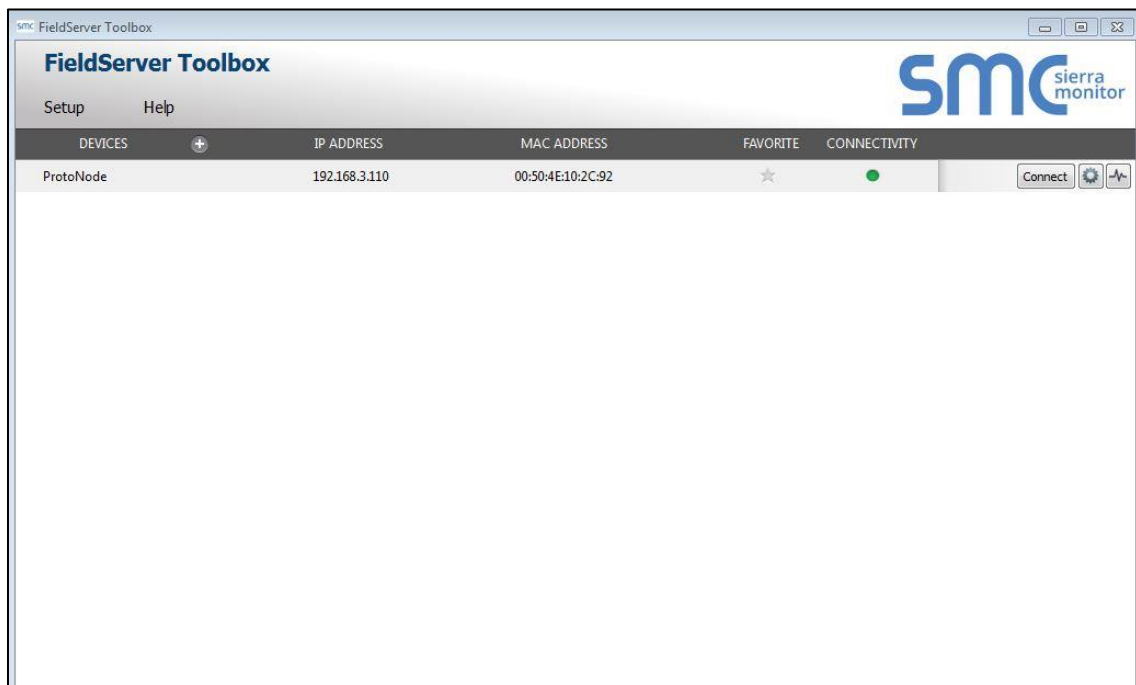


- Select full Diagnostic

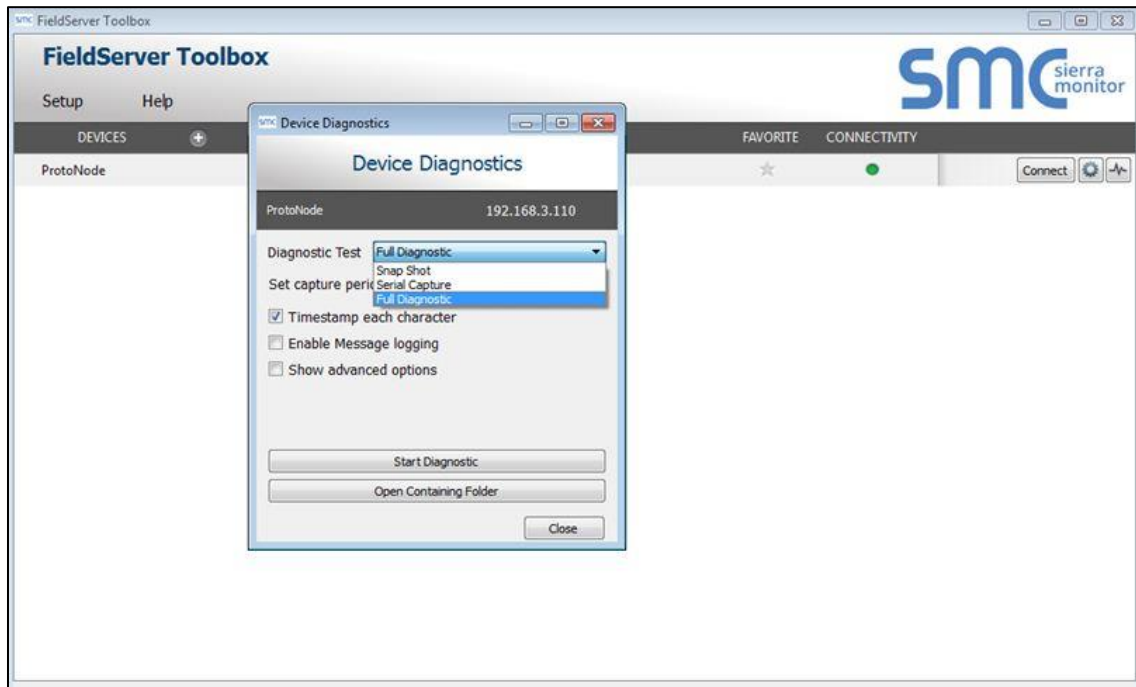


**NOTE:** If desired, the default capture period can be changed.

- Click on “Start Diagnostic”

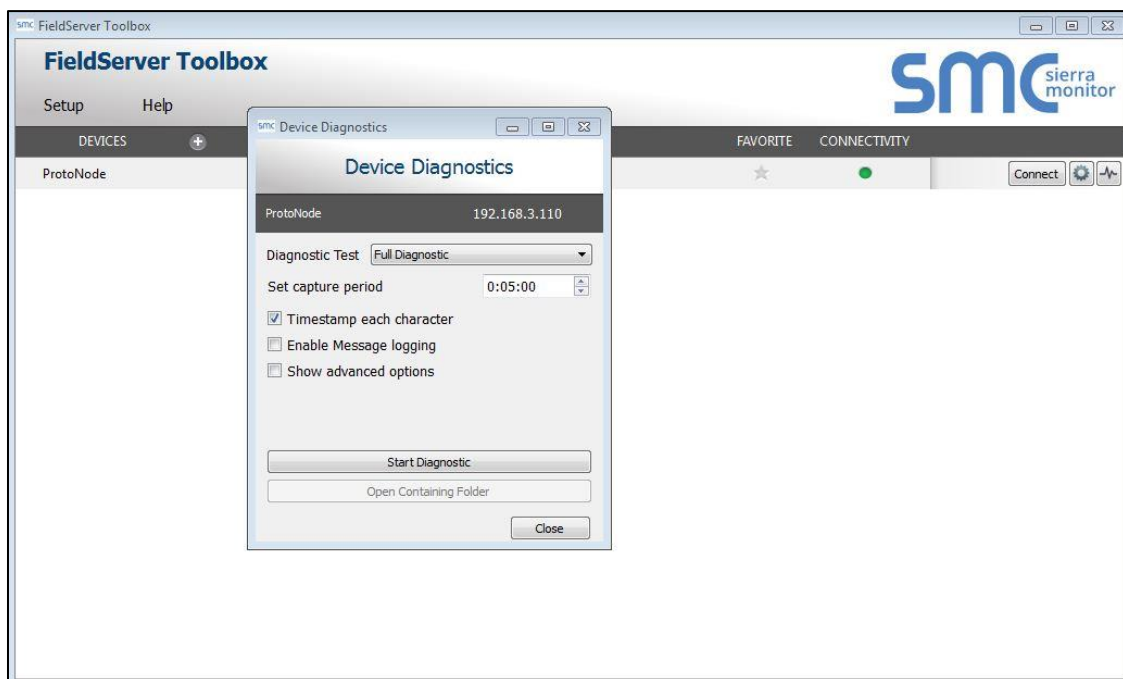

- Wait for Capture period to finish, then the Diagnostic Test Complete window will appear

- **Step 2: Send Log**
  - Once the Diagnostic test is complete, a .zip file is saved on the PC

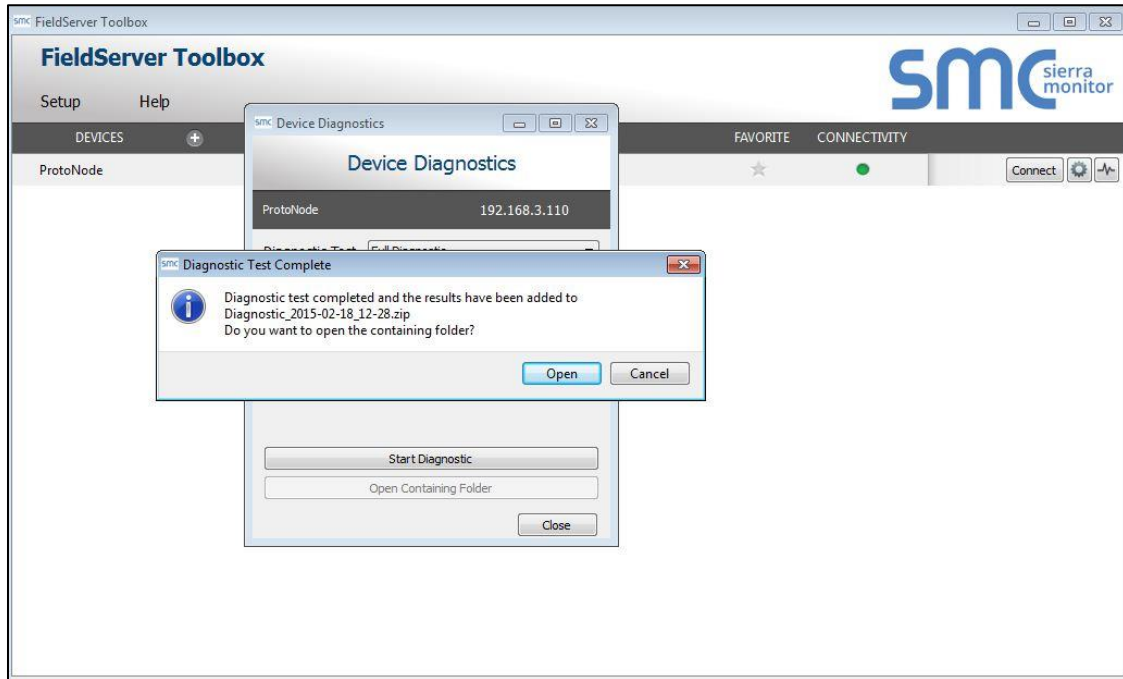

- Choose “Open” to launch explorer and have it point directly at the correct folder
- Send the Diagnostic zip file to [info@purehumidifier.com](mailto:info@purehumidifier.com)

 Diagnostic_2014-07-17_20-15.zip	2014/07/17 20:16	zip Archive	676 KB
---	------------------	-------------	--------

## Appendix A.6. Updating Firmware


To load a new version of the firmware, follow these instructions:

1. Extract and save the new file onto the local PC.
2. Open a web browser and type the IP Address of the FieldServer in the address bar.  
**NOTE:** Default IP Address is 192.168.1.24  
**NOTE:** Use the FS Toolbox utility if the IP Address is unknown ([Appendix A.1](#))
3. Click on the “Diagnostics & Debugging” button.
4. In the Navigation Tree on the left hand side, do the following:
  - a. Click on “Setup”
  - b. Click on “File Transfer”
  - c. Click on the “Firmware” tab
5. In the Firmware tab, click on “Choose Files” and select the firmware file extracted in step 1.
6. Click on the orange “Submit” button.
7. When the download is complete, click on the “System Restart” button.

## Appendix A.7. BACnet: Setting Network\_Number for more than one ProtoNode on Subnet

For both BACnet MS/TP and BACnet/IP, if more than one ProtoNode is connected to the same subnet, they must be assigned unique Network\_Number values.

On the main Web Configuration screen, update the Network Number with the “network\_nr” field and click submit. The default value is 50.

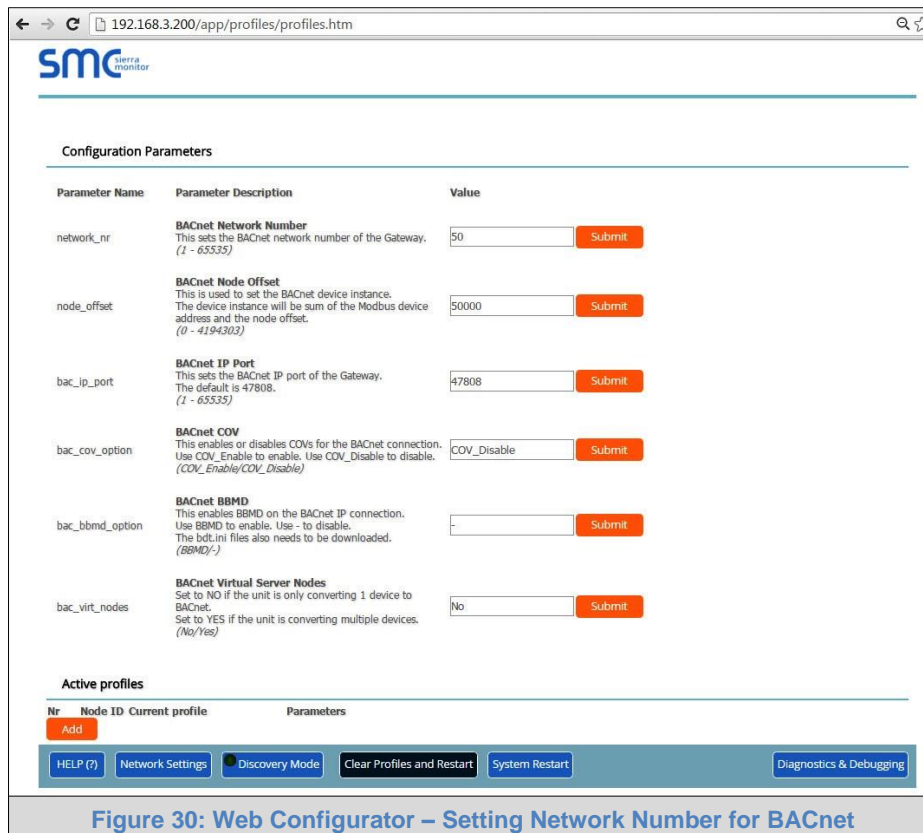

The screenshot shows the SMC Web Configurator interface. The browser address bar displays '192.168.3.200/app/profiles/profiles.htm'. The page title is 'Configuration Parameters'. Below this, there is a table with columns 'Parameter Name', 'Parameter Description', and 'Value'. The table contains six rows of configuration parameters for BACnet, each with a text input field and a 'Submit' button.

Parameter Name	Parameter Description	Value
network_nr	<b>BACnet Network Number</b> This sets the BACnet network number of the Gateway. (1 - 65535)	50 <input type="button" value="Submit"/>
node_offset	<b>BACnet Node Offset</b> This is used to set the BACnet device instance. The device instance will be sum of the Modbus device address and the node offset. (0 - 4194303)	50000 <input type="button" value="Submit"/>
bac_ip_port	<b>BACnet IP Port</b> This sets the BACnet IP port of the Gateway. The default is 47808. (1 - 65535)	47808 <input type="button" value="Submit"/>
bac_cov_option	<b>BACnet COV</b> This enables or disables COVs for the BACnet connection. Use COV_Enable to enable. Use COV_Disable to disable. (COV_Enable/COV_Disable)	COV_Disable <input type="button" value="Submit"/>
bac_bmd_option	<b>BACnet BBMD</b> This enables BBMD on the BACnet IP connection. Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded. (BBMD/-)	- <input type="button" value="Submit"/>
bac_virt_nodes	<b>BACnet Virtual Server Nodes</b> Set to NO if the unit is only converting 1 device to BACnet. Set to YES if the unit is converting multiple devices. (No/Yes)	No <input type="button" value="Submit"/>

Below the table, there is an 'Active profiles' section with a table showing 'Nr', 'Node ID', 'Current profile', and 'Parameters'. There is an 'Add' button below this table. At the bottom of the page, there is a navigation bar with buttons: 'HELP (?)', 'Network Settings', 'Discovery Mode', 'Clear Profiles and Restart', 'System Restart', and 'Diagnostics & Debugging'.

Figure 30: Web Configurator – Setting Network Number for BACnet

## Appendix A.8. Securing ProtoNode with Passwords

Access to the ProtoNode can be restricted by enabling a password. There are 2 access levels defined by 2 account names: Admin and User.

- The Admin account has unrestricted access to the ProtoNode.
- The User account can view any ProtoNode information, but cannot make any changes or restart the ProtoNode.

The password needs to be a minimum of eight characters and **is case sensitive**.

If the password is lost, click cancel on the password authentication popup window, and email the password recovery token to [info@purehumidifier.com](mailto:info@purehumidifier.com) to receive a temporary password from the customer support team. Access the ProtoNode to set a new password.

## Appendix A.9. Reading Data Arrays

- Connect to the ProtoNode with a browser and click on the Diagnostics & Debugging button.
- Select the User Messages branch.
- Select the info tab.
- See which profile has been loaded.
  - Example: prof1b.csv
- In the address bar of the browser, type the IP address/filename.
  - Example: 192.168.1.24/prof1b.csv
- Press the enter key and save the file.
- Open the file and go to the server side map descriptors section.
- The map\_descriptor\_name, data\_array\_name, and data array\_offset is shown for each point.
- Go back to the browser and select the view branch.
- Select the data arrays branch.
- Select the data array that corresponds with the point that you want to monitor.
- View the offset that corresponds with the point that you want to monitor.

## Appendix B. Vendor Information - Pure Humidifier

**NOTE:** All Modbus TCP/IP registers are the same as the Modbus RTU registers for the serial device. If this point list is needed, contact the OEM. The Modbus TCP/IP node address of the device is also the same as the Modbus RTU node address.

### Appendix B.1. Intac Controller Modbus RTU Mappings to BACnet, Metasys N2 and LonWorks

Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Modbus Register	LonWorks Name	LonWorks SNVT
RH Set Point	AV	1	AO	1	102	nvi/nvoXXXRHSP	SNVT_count_inc_f
High Limit Set point	AV	2	AO	2	103	nvi/nvoXXXHiLimSP	SNVT_count_inc_f
RH Low Alarm	AV	3	AO	3	104	nvi/nvoXXXRHLoAlm	SNVT_count_inc_f
RH High Alarm	AV	4	AO	4	105	nvi/nvoXXXRHHiAlm	SNVT_count_inc_f
Operation Mode	AV	5	AO	5	202	nvi/nvoXXXOpMode	SNVT_count_inc_f
Drain Duration Timer	AV	6	AO	6	203	nvi/nvoXXXDrmDurTmr	SNVT_count_inc_f
Drain Interval timer	AV	7	AO	7	204	nvi/nvoXXXDrmIntvTmr	SNVT_count_inc_f
Cool Down Delay	AV	8	AO	8	205	nvi/nvoXXXCoolDwnDel	SNVT_count_inc_f
Cool Down Temp	AV	9	AO	9	206	nvi/nvoXXXCoolDwnTmp	SNVT_temp_p
Fill Delay Timer	AV	10	AO	10	207	nvi/nvoXXXFillDelTmr	SNVT_count_inc_f
Water Temp Set Point	AV	11	AO	11	208	nvi/nvoXXXWtrTmpSP	SNVT_temp_p
Water Temp Hysteresis	AV	12	AO	12	209	nvi/nvoXXXWtrTmpHyst	SNVT_temp_p
End of Use Drain Timer	AV	13	AO	13	210	nvi/nvoXXXEndUsDrmTm	SNVT_count_inc_f
Time to Clean Timer	AV	14	AO	14	211	nvi/nvoXXXTimeClnTmr	SNVT_count_inc_f
Clean Reset	AV	15	AO	15	212	nvi/nvoXXXCleanReset	SNVT_count_inc_f
Intac Address	AV	16	AO	16	213	nvi/nvoXXXIntacAddr	SNVT_count_inc_f
Intac Baud Rate	AV	17	AO	17	214	nvi/nvoXXXIntBaudRat	SNVT_count_inc_f
Room Prop band	AV	18	AO	18	302	nvi/nvoXXXRmPropband	SNVT_count_inc_f
Room hysteresis	AV	19	AO	19	303	nvi/nvoXXXRmHyst	SNVT_count_inc_f
Room Integral	AV	20	AO	20	304	nvi/nvoXXXRmIntegral	SNVT_count_inc_f
Room Derivative	AV	21	AO	21	305	nvi/nvoXXXRmDerivat	SNVT_count_inc_f
Cycle Time	AV	22	AO	22	306	nvi/nvoXXXCycleTime	SNVT_count_inc_f
Duct Prop Band	AV	23	AO	23	307	nvi/nvoXXXDctPropBnd	SNVT_count_inc_f
Duct Hysteresis	AV	24	AO	24	308	nvi/nvoXXXDctHyst	SNVT_count_inc_f
Duct Integral	AV	25	AO	25	309	nvi/nvoXXXDctIntegrI	SNVT_count_inc_f
Duct Derivative	AV	26	AO	26	310	nvi/nvoXXXDctDeriva	SNVT_count_inc_f
RH Input filter	AV	27	AO	27	311	nvi/nvoXXXRHInptFltr	SNVT_count_inc_f
Control Source	AV	28	AO	28	503	nvi/nvoXXXCtrlSrc	SNVT_count_inc_f
Water Sensor	AV	29	AO	29	504	nvi/nvoXXXWtrSensor	SNVT_count_inc_f
RH Sensor	AV	30	AO	30	505	nvi/nvoXXXRHSensor	SNVT_count_inc_f
RH Process Low	AV	31	AO	31	506	nvi/nvoXXXRHProcLo	SNVT_count_inc_f
RH Process High	AV	32	AO	32	507	nvi/nvoXXXRHProcHi	SNVT_count_inc_f
High Limit Sensor	AV	33	AO	33	509	nvi/nvoXXXHiLimSnsr	SNVT_count_inc_f
HighLimit Process Low	AV	34	AO	34	510	nvi/nvoXXXHiLmProcLo	SNVT_count_inc_f
HighLimit Process High	AV	35	AO	35	511	nvi/nvoXXXHiLmProcHi	SNVT_count_inc_f

Outdoor Air Sensor	AV	36	AO	36	512	nvi/nvoXXXOASensor	SNVT_count_inc_f
OAT Process Low	AV	37	AO	37	513	nvi/nvoXXXOATProcLo	SNVT_count_inc_f
OAT Process High	AV	38	AO	38	514	nvi/nvoXXXOATProcHi	SNVT_count_inc_f
OAT Range Low	AV	39	AO	39	515	nvi/nvoXXXOATRangeLo	SNVT_count_inc_f
OAT Range High	AV	40	AO	40	516	nvi/nvoXXXOATRangeHi	SNVT_count_inc_f
OAT Offset	AV	41	AO	41	517	nvi/nvoXXXOATOffset	SNVT_count_inc_f
Process Output	AV	42	AO	42	518	nvi/nvoXXXProcOutput	SNVT_count_inc_f
Out Process Low	AV	43	AO	43	519	nvi/nvoXXXOutProcLo	SNVT_count_inc_f
Out Process High	AV	44	AO	44	520	nvi/nvoXXXOutProcHi	SNVT_count_inc_f
Dedicated Input	AV	45	AO	45	521	nvi/nvoXXXDedctdInp	SNVT_count_inc_f
Temp units	AV	46	AO	46	522	nvi/nvoXXXTmpunits	SNVT_count_inc_f
Capacity Units	AV	47	AO	47	523	nvi/nvoXXXCapUnits	SNVT_count_inc_f
Unit Capacity	AV	48	AO	48	524	nvi/nvoXXXUnitCap	SNVT_count_inc_f
Menu access	AV	49	AO	49	526	nvi/nvoXXXMenuAccess	SNVT_count_inc_f
Control Type	AV	50	AO	50	702	nvi/nvoXXXCtrlType	SNVT_count_inc_f
Active heaters	AV	51	AO	51	703	nvi/nvoXXXActHeaters	SNVT_count_inc_f
Water Enable	AV	52	AO	52	704	nvi/nvoXXXWtrEnable	SNVT_count_inc_f
Air Enable	AV	53	AO	53	705	nvi/nvoXXXAirEnable	SNVT_count_inc_f
Water Level Sensor	AV	54	AO	54	706	nvi/nvoXXXWtrLvlSnsr	SNVT_count_inc_f
Drain Type	AV	55	AO	55	707	nvi/nvoXXXDrnType	SNVT_count_inc_f
High limit enable	AV	56	AO	56	708	nvi/nvoXXXHiLimEnbl	SNVT_count_inc_f
Clean Time	AV	57	AO	57	709	nvi/nvoXXXCleanTime	SNVT_count_inc_f
Gas Burners	AV	58	AO	58	710	nvi/nvoXXXGasBrnrs	SNVT_count_inc_f
Low Fire Set point	AV	59	AO	59	711	nvi/nvoXXXLoFireSP	SNVT_count_inc_f
Low Fire Hysteresis	AV	60	AO	60	712	nvi/nvoXXXLoFireHyst	SNVT_count_inc_f
Burner #2 Set point	AV	61	AO	61	713	nvi/nvoXXXBrnr2SP	SNVT_count_inc_f
Burner #2 Hysteresis	AV	62	AO	62	714	nvi/nvoXXXBrnr2Hyst	SNVT_count_inc_f
Burner #3 Set Point	AV	63	AO	63	715	nvi/nvoXXXBrnr3SP	SNVT_count_inc_f
Burner #3 Hysteresis	AV	64	AO	64	716	nvi/nvoXXXBrnr3Hyst	SNVT_count_inc_f
Post purge timer	AV	65	AO	65	717	nvi/nvoXXXPstPrgTmr	SNVT_count_inc_f
VFD Intensity	AV	66	AO	66	718	nvi/nvoXXXVFDIntnst	SNVT_count_inc_f
Range Checking	AV	67	AO	67	719	nvi/nvoXXXRangeCheck	SNVT_count_inc_f
Low H2O Timer	AV	68	AO	68	720	nvi/nvoXXXLoH2OTmr	SNVT_count_inc_f
Actual Humidity	AV	69	AO	69	049	nvi/nvoXXXActualHum	SNVT_count_inc_f
Control RH Sensor	AV	70	AO	70	050	nvi/nvoXXXCtrlRHSnsr	SNVT_count_inc_f
High Limit RH Actual	AV	71	AO	71	051	nvi/nvoXXXHiLimRHAct	SNVT_count_inc_f
High Limit RH Sensor	AV	72	AO	72	052	nvi/nvoXXXHiLmRHSnsr	SNVT_count_inc_f
Water Temp Actual	AV	73	AO	73	053	nvi/nvoXXXWtrTmpAct	SNVT_count_inc_f
Water Sensor(temp)	AV	74	AO	74	054	nvi/nvoXXXWtrSnsrTmp	SNVT_count_inc_f
Outdoor Air Temp Actual	AV	75	AO	75	055	nvi/nvoXXXOATmpAct	SNVT_count_inc_f
Outdoor Air Sensor	AV	76	AO	76	056	nvi/nvoXXXOASensor2	SNVT_count_inc_f
Heater #1 %Power	AV	77	AO	77	823	nvi/nvoXXXHtr1PerPwr	SNVT_count_inc_f
Heater #2 %Power	AV	78	AO	78	824	nvi/nvoXXXHtr2PerPwr	SNVT_count_inc_f
Heater #3 %Power	AV	79	AO	79	825	nvi/nvoXXXHtr3PerPwr	SNVT_count_inc_f



Heater #4 %Power	AV	80	AO	80	826	nvi/nvoXXXHtr4PerPwr	SNVT_count_inc_f
Heater Power	AV	81	AO	81	853	nvi/nvoXXXHtrPower	SNVT_count_inc_f
Water Level	AV	82	AO	82	831	nvi/nvoXXXWtrLevel	SNVT_count_inc_f
Accumulated Run Time	AV	83	AO	83	852	nvi/nvoXXXAccmRnTim	SNVT_count_inc_f
Internal Module #1 I/O Error	AV	84	AO	84	847	nvi/nvoXXXIntMd1IOEr	SNVT_count_inc_f
Internal Module #2 I/O Error	AV	85	AO	85	848	nvi/nvoXXXIntMd2IOEr	SNVT_count_inc_f
Internal Module #3 I/O Error	AV	86	AO	86	849	nvi/nvoXXXIntMd3IOEr	SNVT_count_inc_f
Interlock Input Open	AV	87	AO	87	857	nvi/nvoXXXIntlkInpOp	SNVT_count_inc_f
Dedicated Input	AV	88	AO	88	858	nvi/nvoXXXDedInpt2	SNVT_count_inc_f
Actual Water Level	AV	89	AO	89	832	nvi/nvoXXXActWtrLvl	SNVT_count_inc_f
Fill Valve Status	AV	90	AO	90	840	nvi/nvoXXXFIvIvStat	SNVT_count_inc_f

**Appendix C. “A” Bank DIP Switch Settings**
**Appendix C.1. “A” Bank DIP Switch Settings**

Address	A0	A1	A2	A3	A4	A5	A6	A7
1	On	Off	Off	Off	Off	Off	Off	Off
2	Off	On	Off	Off	Off	Off	Off	Off
3	On	On	Off	Off	Off	Off	Off	Off
4	Off	Off	On	Off	Off	Off	Off	Off
5	On	Off	On	Off	Off	Off	Off	Off
6	Off	On	On	Off	Off	Off	Off	Off
7	On	On	On	Off	Off	Off	Off	Off
8	Off	Off	Off	On	Off	Off	Off	Off
9	On	Off	Off	On	Off	Off	Off	Off
10	Off	On	Off	On	Off	Off	Off	Off
11	On	On	Off	On	Off	Off	Off	Off
12	Off	Off	On	On	Off	Off	Off	Off
13	On	Off	On	On	Off	Off	Off	Off
14	Off	On	On	On	Off	Off	Off	Off
15	On	On	On	On	Off	Off	Off	Off
16	Off	Off	Off	Off	On	Off	Off	Off
17	On	Off	Off	Off	On	Off	Off	Off
18	Off	On	Off	Off	On	Off	Off	Off
19	On	On	Off	Off	On	Off	Off	Off
20	Off	Off	On	Off	On	Off	Off	Off
21	On	Off	On	Off	On	Off	Off	Off
22	Off	On	On	Off	On	Off	Off	Off
23	On	On	On	Off	On	Off	Off	Off
24	Off	Off	Off	On	On	Off	Off	Off
25	On	Off	Off	On	On	Off	Off	Off
26	Off	On	Off	On	On	Off	Off	Off
27	On	On	Off	On	On	Off	Off	Off
28	Off	Off	On	On	On	Off	Off	Off
29	On	Off	On	On	On	Off	Off	Off
30	Off	On	On	On	On	Off	Off	Off
31	On	On	On	On	On	Off	Off	Off
32	Off	Off	Off	Off	Off	On	Off	Off
33	On	Off	Off	Off	Off	On	Off	Off
34	Off	On	Off	Off	Off	On	Off	Off
35	On	On	Off	Off	Off	On	Off	Off
36	Off	Off	On	Off	Off	On	Off	Off
37	On	Off	On	Off	Off	On	Off	Off
38	Off	On	On	Off	Off	On	Off	Off
39	On	On	On	Off	Off	On	Off	Off
40	Off	Off	Off	On	Off	On	Off	Off
41	On	Off	Off	On	Off	On	Off	Off
42	Off	On	Off	On	Off	On	Off	Off
43	On	On	Off	On	Off	On	Off	Off
44	Off	Off	On	On	Off	On	Off	Off
45	On	Off	On	On	Off	On	Off	Off
46	Off	On	On	On	Off	On	Off	Off

Address	A0	A1	A2	A3	A4	A5	A6	A7
47	On	On	On	On	Off	On	Off	Off
48	Off	Off	Off	Off	On	On	Off	Off
49	On	Off	Off	Off	On	On	Off	Off
50	Off	On	Off	Off	On	On	Off	Off
51	On	On	Off	Off	On	On	Off	Off
52	Off	Off	On	Off	On	On	Off	Off
53	On	Off	On	Off	On	On	Off	Off
54	Off	On	On	Off	On	On	Off	Off
55	On	On	On	Off	On	On	Off	Off
56	Off	Off	Off	On	On	On	Off	Off
57	On	Off	Off	On	On	On	Off	Off
58	Off	On	Off	On	On	On	Off	Off
59	On	On	Off	On	On	On	Off	Off
60	Off	Off	On	On	On	On	Off	Off
61	On	Off	On	On	On	On	Off	Off
62	Off	On	On	On	On	On	Off	Off
63	On	On	On	On	On	On	Off	Off
64	Off	Off	Off	Off	Off	Off	On	Off
65	On	Off	Off	Off	Off	Off	On	Off
66	Off	On	Off	Off	Off	Off	On	Off
67	On	On	Off	Off	Off	Off	On	Off
68	Off	Off	On	Off	Off	Off	On	Off
69	On	Off	On	Off	Off	Off	On	Off
70	Off	On	On	Off	Off	Off	On	Off
71	On	On	On	Off	Off	Off	On	Off
72	Off	Off	Off	On	Off	Off	On	Off
73	On	Off	Off	On	Off	Off	On	Off
74	Off	On	Off	On	Off	Off	On	Off
75	On	On	Off	On	Off	Off	On	Off
76	Off	Off	On	On	Off	Off	On	Off
77	On	Off	On	On	Off	Off	On	Off
78	Off	On	On	On	Off	Off	On	Off
79	On	On	On	On	Off	Off	On	Off
80	Off	Off	Off	Off	On	Off	On	Off
81	On	Off	Off	Off	On	Off	On	Off
82	Off	On	Off	Off	On	Off	On	Off
83	On	On	Off	Off	On	Off	On	Off
84	Off	Off	On	Off	On	Off	On	Off
85	On	Off	On	Off	On	Off	On	Off
86	Off	On	On	Off	On	Off	On	Off
87	On	On	On	Off	On	Off	On	Off
88	Off	Off	Off	On	On	Off	On	Off
89	On	Off	Off	On	On	Off	On	Off
90	Off	On	Off	On	On	Off	On	Off
91	On	On	Off	On	On	Off	On	Off
92	Off	Off	On	On	On	Off	On	Off

Address	A0	A1	A2	A3	A4	A5	A6	A7
93	On	Off	On	On	On	Off	On	Off
94	Off	On	On	On	On	Off	On	Off
95	On	On	On	On	On	Off	On	Off
96	Off	Off	Off	Off	Off	On	On	Off
97	On	Off	Off	Off	Off	On	On	Off
98	Off	On	Off	Off	Off	On	On	Off
99	On	On	Off	Off	Off	On	On	Off
100	Off	Off	On	Off	Off	On	On	Off
101	On	Off	On	Off	Off	On	On	Off
102	Off	On	On	Off	Off	On	On	Off
103	On	On	On	Off	Off	On	On	Off
104	Off	Off	Off	On	Off	On	On	Off
105	On	Off	Off	On	Off	On	On	Off
106	Off	On	Off	On	Off	On	On	Off
107	On	On	Off	On	Off	On	On	Off
108	Off	Off	On	On	Off	On	On	Off
109	On	Off	On	On	Off	On	On	Off
110	Off	On	On	On	Off	On	On	Off
111	On	On	On	On	Off	On	On	Off
112	Off	Off	Off	Off	On	On	On	Off
113	On	Off	Off	Off	On	On	On	Off
114	Off	On	Off	Off	On	On	On	Off
115	On	On	Off	Off	On	On	On	Off
116	Off	Off	On	Off	On	On	On	Off
117	On	Off	On	Off	On	On	On	Off
118	Off	On	On	Off	On	On	On	Off
119	On	On	On	Off	On	On	On	Off
120	Off	Off	Off	On	On	On	On	Off
121	On	Off	Off	On	On	On	On	Off
122	Off	On	Off	On	On	On	On	Off
123	On	On	Off	On	On	On	On	Off
124	Off	Off	On	On	On	On	On	Off
125	On	Off	On	On	On	On	On	Off
126	Off	On	On	On	On	On	On	Off
127	On	On	On	On	On	On	On	Off
128	Off	Off	Off	Off	Off	Off	Off	On
129	On	Off	Off	Off	Off	Off	Off	On
130	Off	On	Off	Off	Off	Off	Off	On
131	On	On	Off	Off	Off	Off	Off	On
132	Off	Off	On	Off	Off	Off	Off	On
133	On	Off	On	Off	Off	Off	Off	On
134	Off	On	On	Off	Off	Off	Off	On
135	On	On	On	Off	Off	Off	Off	On
136	Off	Off	Off	On	Off	Off	Off	On
137	On	Off	Off	On	Off	Off	Off	On
138	Off	On	Off	On	Off	Off	Off	On
139	On	On	Off	On	Off	Off	Off	On
140	Off	Off	On	On	Off	Off	Off	On
141	On	Off	On	On	Off	Off	Off	On

Address	A0	A1	A2	A3	A4	A5	A6	A7
142	Off	On	On	On	Off	Off	Off	On
143	On	On	On	On	Off	Off	Off	On
144	Off	Off	Off	Off	On	Off	Off	On
145	On	Off	Off	Off	On	Off	Off	On
146	Off	On	Off	Off	On	Off	Off	On
147	On	On	Off	Off	On	Off	Off	On
148	Off	Off	On	Off	On	Off	Off	On
149	On	Off	On	Off	On	Off	Off	On
150	Off	On	On	Off	On	Off	Off	On
151	On	On	On	Off	On	Off	Off	On
152	Off	Off	Off	On	On	Off	Off	On
153	On	Off	Off	On	On	Off	Off	On
154	Off	On	Off	On	On	Off	Off	On
155	On	On	Off	On	On	Off	Off	On
156	Off	Off	On	On	On	Off	Off	On
157	On	Off	On	On	On	Off	Off	On
158	Off	On	On	On	On	Off	Off	On
159	On	On	On	On	On	Off	Off	On
160	Off	Off	Off	Off	Off	On	Off	On
161	On	Off	Off	Off	Off	On	Off	On
162	Off	On	Off	Off	Off	On	Off	On
163	On	On	Off	Off	Off	On	Off	On
164	Off	Off	On	Off	Off	On	Off	On
165	On	Off	On	Off	Off	On	Off	On
166	Off	On	On	Off	Off	On	Off	On
167	On	On	On	Off	Off	On	Off	On
168	Off	Off	Off	On	Off	On	Off	On
169	On	Off	Off	On	Off	On	Off	On
170	Off	On	Off	On	Off	On	Off	On
171	On	On	Off	On	Off	On	Off	On
172	Off	Off	On	On	Off	On	Off	On
173	On	Off	On	On	Off	On	Off	On
174	Off	On	On	On	Off	On	Off	On
175	On	On	On	On	Off	On	Off	On
176	Off	Off	Off	Off	On	On	Off	On
177	On	Off	Off	Off	On	On	Off	On
178	Off	On	Off	Off	On	On	Off	On
179	On	On	Off	Off	On	On	Off	On
180	Off	Off	On	Off	On	On	Off	On
181	On	Off	On	Off	On	On	Off	On
182	Off	On	On	Off	On	On	Off	On
183	On	On	On	Off	On	On	Off	On
184	Off	Off	Off	On	On	On	Off	On
185	On	Off	Off	On	On	On	Off	On
186	Off	On	Off	On	On	On	Off	On
187	On	On	Off	On	On	On	Off	On
188	Off	Off	On	On	On	On	Off	On
189	On	Off	On	On	On	On	Off	On
190	Off	On	On	On	On	On	Off	On

Address	A0	A1	A2	A3	A4	A5	A6	A7
191	On	On	On	On	On	On	Off	On
192	Off	Off	Off	Off	Off	Off	On	On
193	On	Off	Off	Off	Off	Off	On	On
194	Off	On	Off	Off	Off	Off	On	On
195	On	On	Off	Off	Off	Off	On	On
196	Off	Off	On	Off	Off	Off	On	On
197	On	Off	On	Off	Off	Off	On	On
198	Off	On	On	Off	Off	Off	On	On
199	On	On	On	Off	Off	Off	On	On
200	Off	Off	Off	On	Off	Off	On	On
201	On	Off	Off	On	Off	Off	On	On
202	Off	On	Off	On	Off	Off	On	On
203	On	On	Off	On	Off	Off	On	On
204	Off	Off	On	On	Off	Off	On	On
205	On	Off	On	On	Off	Off	On	On
206	Off	On	On	On	Off	Off	On	On
207	On	On	On	On	Off	Off	On	On
208	Off	Off	Off	Off	On	Off	On	On
209	On	Off	Off	Off	On	Off	On	On
210	Off	On	Off	Off	On	Off	On	On
211	On	On	Off	Off	On	Off	On	On
212	Off	Off	On	Off	On	Off	On	On
213	On	Off	On	Off	On	Off	On	On
214	Off	On	On	Off	On	Off	On	On
215	On	On	On	Off	On	Off	On	On
216	Off	Off	Off	On	On	Off	On	On
217	On	Off	Off	On	On	Off	On	On
218	Off	On	Off	On	On	Off	On	On
219	On	On	Off	On	On	Off	On	On
220	Off	Off	On	On	On	Off	On	On
221	On	Off	On	On	On	Off	On	On
222	Off	On	On	On	On	Off	On	On
223	On	On	On	On	On	Off	On	On
224	Off	Off	Off	Off	Off	On	On	On
225	On	Off	Off	Off	Off	On	On	On
226	Off	On	Off	Off	Off	On	On	On
227	On	On	Off	Off	Off	On	On	On
228	Off	Off	On	Off	Off	On	On	On
229	On	Off	On	Off	Off	On	On	On
230	Off	On	On	Off	Off	On	On	On
231	On	On	On	Off	Off	On	On	On
232	Off	Off	Off	On	Off	On	On	On
233	On	Off	Off	On	Off	On	On	On
234	Off	On	Off	On	Off	On	On	On
235	On	On	Off	On	Off	On	On	On
236	Off	Off	On	On	Off	On	On	On
237	On	Off	On	On	Off	On	On	On
238	Off	On	On	On	Off	On	On	On
239	On	On	On	On	Off	On	On	On

Address	A0	A1	A2	A3	A4	A5	A6	A7
240	Off	Off	Off	Off	On	On	On	On
241	On	Off	Off	Off	On	On	On	On
242	Off	On	Off	Off	On	On	On	On
243	On	On	Off	Off	On	On	On	On
244	Off	Off	On	Off	On	On	On	On
245	On	Off	On	Off	On	On	On	On
246	Off	On	On	Off	On	On	On	On
247	On	On	On	Off	On	On	On	On
248	Off	Off	Off	On	On	On	On	On
249	On	Off	Off	On	On	On	On	On
250	Off	On	Off	On	On	On	On	On
251	On	On	Off	On	On	On	On	On
252	Off	Off	On	On	On	On	On	On
253	On	Off	On	On	On	On	On	On
254	Off	On	On	On	On	On	On	On
255	On	On	On	On	On	On	On	On

## Appendix D. Reference

### Appendix D.1. Specifications



	ProtoNode FPC-N34	ProtoNode FPC-N35
Electrical Connections	One 6-pin Phoenix connector with: RS-485 port (+ / - / gnd) Power port (+ / - / Frame-gnd) One 3-pin Phoenix connector with RS-485 port (+ / - / gnd) One Ethernet 10/100 BaseT port	One 6-pin Phoenix connector with: RS-485 port (+ / - / gnd) Power port (+ / - / Frame-gnd) One 2-pin Phoenix connector with: One FTT-10 LonWorks port One Ethernet 10/100 BaseT port
Approvals	CE Certified; TUV approved to UL 916, EN 60950-1, EN 50491-3 and CSA C22-2 standards; FCC Class A Part 15; DNP3 Conformance Tested; RoHS Compliant; CSA 205 Approved	
	BTL Marked	LonMark Certified
Power Requirements	Multi-mode power adapter: 9-30VDC or 12 - 24VAC	
Physical Dimensions	11.5 cm L x 8.3 cm W x 4.1 cm H (4.5 x 3.2 x 1.6 in.)	
Weight	0.2 kg (0.4 lbs)	
Operating Temperature	-40°C to 75°C (-40°F to167°F)	
Surge Suppression	EN61000-4-2 ESD EN61000-4-3 EMC EN61000-4-4 EFT	
Humidity	5 - 90% RH (non-condensing)	
(Specifications subject to change without notice)		
Figure 31: Specifications		

Figure 31: Specifications

#### Appendix D.1.1. Compliance with UL Regulations

For UL compliance, the following instructions must be met when operating ProtoNode.

- The units shall be powered by listed LPS or Class 2 power supply suited to the expected operating temperature range.
- The interconnecting power connector and power cable shall:
  - Comply with local electrical code
  - Be suited to the expected operating temperature range
  - Meet the current and voltage rating for ProtoNode
- Furthermore, the interconnecting power cable shall:
  - Be of length not exceeding 3.05m (118.3")
  - Be constructed of materials rated VW-1, FT-1 or better
- If the unit is to be installed in an operating environment with a temperature above 65 °C, it should be installed in a Restricted Access Area requiring a key or a special tool to gain access.
- This device must not be connected to a LAN segment with outdoor wiring.

## **Appendix E. Limited 2 Year Warranty**

Sierra Monitor Corporation warrants its products to be free from defects in workmanship or material under normal use and service for two years after date of shipment. Sierra Monitor Corporation will repair or replace any equipment found to be defective during the warranty period. Final determination of the nature and responsibility for defective or damaged equipment will be made by Sierra Monitor Corporation personnel.

All warranties hereunder are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without Sierra Monitor Corporation's approval or which have been subjected to accident, improper maintenance, installation or application, or on which original identification marks have been removed or altered. This Limited Warranty also will not apply to interconnecting cables or wires, consumables or to any damage resulting from battery leakage.

In all cases Sierra Monitor Corporation's responsibility and liability under this warranty shall be limited to the cost of the equipment. The purchaser must obtain shipping instructions for the prepaid return of any item under this warranty provision and compliance with such instruction shall be a condition of this warranty.

Except for the express warranty stated above, Sierra Monitor Corporation disclaims all warranties with regard to the products sold hereunder including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of Sierra Monitor Corporation for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the product.